


# Humidistat Operating Guide

## Display:

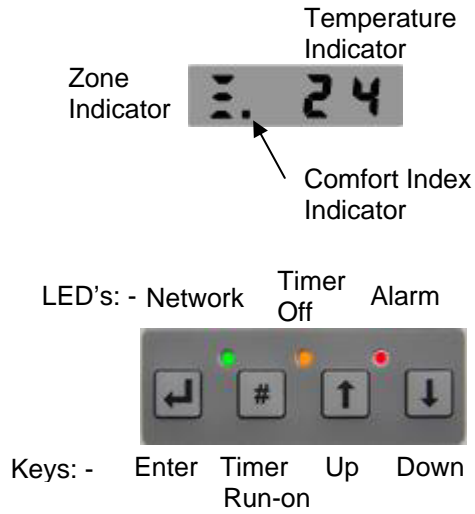

## Instructions for "Type 1" Thermostat

**Changing the Temperature:** - (note. Zone bar pulsates when in the User Change mode)

### Enter User change mode



3 seconds

Step 1

### Change Temperature value



Step 2



Step 3

### Repeat steps 2 and 3 for zone 2 and 3




## Enabling a "Run-on"

### Enter run-on mode




3 seconds

### Increase hours

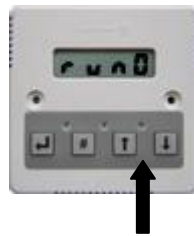

### Exit run-on mode

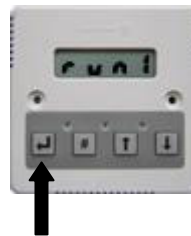


Installation Guide with all parameters and specifications is available on [www.resourcedm.com](http://www.resourcedm.com) Technical Support

Resource Data Management  
80 Johnstone Avenue  
Hillington  
Glasgow  
G52 4NZ


Tel: 0141-810-2828  
Fax: 0141-810-2829  
sales@resourcedm.com  
www.resourcedm.com

Please note: The specifications of the product detailed on this data sheet may change without notice. RDM Ltd shall not be liable for errors or for incidental or consequential damages, directly or indirectly, in connection with the furnishing, performance or misuse of this product or document.

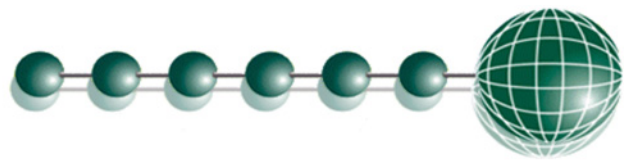

Instructions for "Type 2" Thermostat/Humidistat

Changing the Temperature and Humidity: -

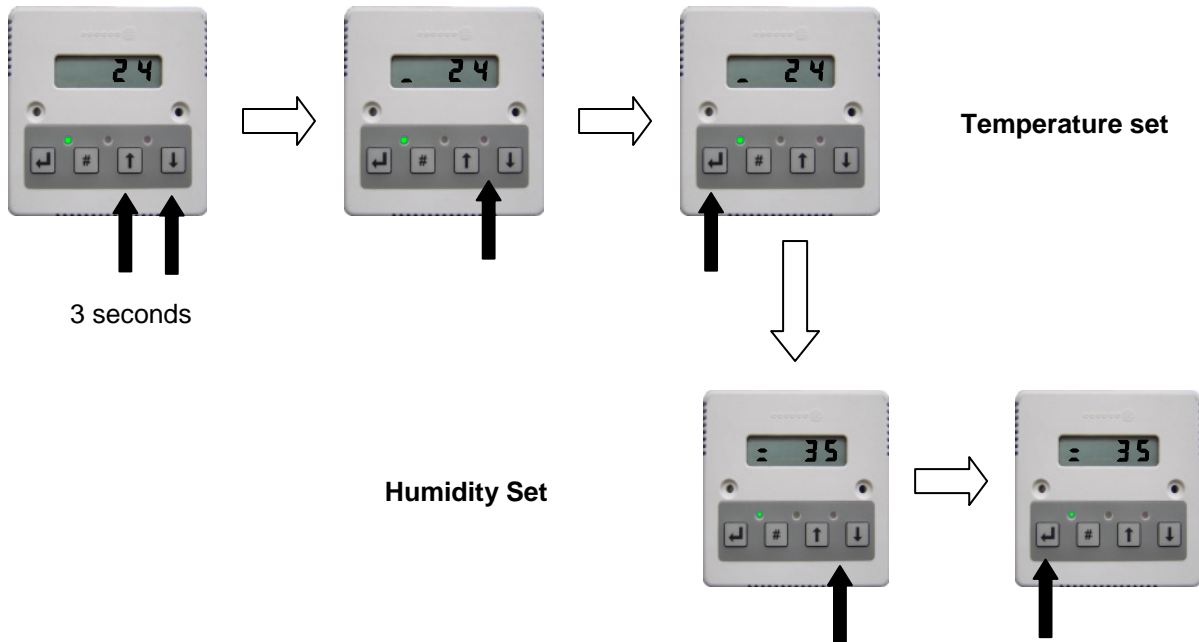

Enabling a "Run-on"

Enter run-on mode

Increase hours

Exit run-on mode

