



Resource
Data Management

Mercury 3 Mobile Controller

Commissioning/User Guide
Revision 3.5



PR0740 MOB / PR0744 MOB
PR075X MOB / PR076X MOB

Contents

The Mercury 3 & Intuitive Mercury Range.....	4
From Resource Data Management.....	4
For Version Mob 3.5.....	4
Variants.....	4
Configuration.....	4
Compatible Network Interfaces.....	5
Front Display Features.....	5
LED's: -.....	5
Connections.....	6
Mercury Mk3 I/O Connections (PR0740).....	6
Mercury I/O Connections (PR0744).....	6
Intuitive Mercury I/O Connections.....	7
Intuitive Mercury Network Expansion.....	7
Input and Output Allocation Tables.....	8
Input / Output allocation table.....	8
Switched Resistor Values.....	8
Ordering Information.....	8
Mercury Mk3 Hardware.....	8
Intuitive Mercury Hardware.....	9
Setting up the controller.....	9
Setup through front buttons.....	9
Setup Function Menu.....	9
Recommended set-up method.....	10
rtc. Real time clock (This will automatically synchronise on network systems).....	10
type. Set/view controller type.....	10
PArA. Set/view parameters (This can be achieved at the network front end).....	10
Unit. Set/view temperature unit and Probe type.....	10
Display.....	11
Parameter Tables.....	11
Parameter Descriptions.....	13
Relay State and functional operation (all variants except PR0744).....	16
Relay State and functional operation (PR0744 variant only).....	16
Relay and screen states during defrost.....	16
Defrost Type (P-91).....	17
Defrost Termination.....	17
Fan Delay after Defrost.....	17
Network Configuration – RS232 comms.....	17
RS485 Legacy module / Intuitive Internal RS485 Network card.....	17
Fast Network Address Reset.....	18
IP Futura module & Intuitive Internal IP Network card.....	18



Please ensure all power is switched off before installing or maintaining this product.

Mercury Switch	19
Network Configuration – IP comms	19
Bluetooth Network module	20
Viewing	20
Input / Output Table.....	21
Maximum and Minimum Control Temperature	21
Messages.....	22
Network Alarms.....	22
Modifying controller states	22
Fans Only “FAnS”	22
Case Off “CASE”	22
Lights Only “Ligt”	22
Probe Offset	23
Remote Commands.....	23
Specification	24
Switched Resistor Example Wiring	25
Installation & Dimensions	25
Panel Cut-out and Clearances	25
Fixing	25
Dimensions – Mercury Mk3.....	26
Dimensions – Intuitive Mercury Controller	26
Intuitive Mercury Mounting Instructions	27
Cleaning.....	27
Appendix 1: Webpage Appearance	27
Warranty Information.....	33
Disclaimer.....	33
Revision History.....	33



Please ensure all power is switched off before installing or maintaining this product.

The Mercury 3 & Intuitive Mercury Range

From Resource Data Management

For Version Mob 3.5

The Mercury Mk3 Mobile controller is intended for use in refrigeration display cabinets with one or two integral compressors with each compressor having a temperature probe fitted to enable the compressor to be stopped if a set (discharge) temperature is exceeded as an optional safety feature. The controller will switch on one or two compressors based on the average of an air on and air off temperature probes and has outputs to control lights, fans and defrost control. The lighting relay can be set to operate as an alarm relay if required. The controller also has an inbuilt defrost timer and 7-day lighting control timer which can also be used to switch the cabinet off and on at specific times, this can be a useful energy saving feature if the cabinet contains non-perishable goods (such as drinks) and can be automatically switched off at night.

There is also a DIN rail mounted version, known as the Intuitive Mercury, which is designed to be used in a control panel or electrical tray. This range has the same features as the Mercury Mk3 controller with additional benefits such as higher rated relays, each protected by an integral fuse and fuse protection for the incoming power supply. All connections are plug in socket and there are multiple network interfaces to choose from.

The controller supports PT1000, NTC2K, 470R, 700R, 3K, 5K, 6K, NTC2K25, NTC10K T1 or NTC10K T2 temperature probes (note: probe types cannot be mixed)

Variants

Description	Comms	Display
Mercury Mk3 Single or Twin Compressor Controller, integral/remote display, built in IP network card.	IP	Integral / Remote Display
Mercury Mk3 Single or Twin Compressor Controller, integral/remote display, RS232 comms.	RS232	
Intuitive Mercury Single or Twin Compressor Controller, integral display, RS232 comms.	RS232	Integral
Intuitive Mercury Single or Twin Compressor Controller, integral display, built in IP network card.	IP	Integral
Intuitive Mercury Single or Twin Compressor Controller, remote display, RS232 comms.	RS232	Remote
Intuitive Mercury Single or Twin Compressor Controller, remote display, built in IP network card.	IP	Remote

Configuration

The controller gives you two configuration options: -

Display value	Type
1	Integral controller (HT)
2	Integral controller (LT)

The controller is delivered pre-configured as type 1.



Please ensure all power is switched off before installing or maintaining this product.

 

Compatible Network Interfaces

Mercury and Intuitive Mercury controllers which do not have an IP interface built in are capable of connecting to either a TCP/IP local area network, an RS485 Genus compatible network, an RDM wireless mesh network or they can be used in standalone mode with no network output. To connect to a network, you must add the correct communications module. Connecting to any of these communication modules will automatically be detected on power up and will affect the 'Net' menu set up screens available to you. **Note** controllers with built in IP will be able to communicate to any IP switch, including the rear ports of the RDM Mercury Hub.

Description	Part Number
IP Futura (Single Mercury to IP Interface)	PR0016
IP Futura, DIN rail mounted	PR0016-DIN
IP Futura, DIN rail mounted with 2 x CAT 5 sockets	PR0016-DUALDIN
Intuitive Switch with 6 x RS232 ports, 4 x Ethernet Ports and a 4-20mA Pressure Transducer connection.	PR0758-6P4E-PHI
Intuitive Switch with 12 x RS232 ports and 4 x Ethernet Ports	PR0758-12P4E
Intuitive Switch with 12 x RS232 ports, 4 x Ethernet Ports and a 4-20mA Pressure Transducer connection.	PR0758-12P4E-PHI
Intuitive Switch with 16 x RS232 ports, 4 x Ethernet Ports and a 4-20mA Pressure Transducer connection.	PR0758-16P4E-PHI
Intuitive Switch with 16 x RS232 ports, 3 x Ethernet Ports and 1 x Fibre connection.	PR0757-16P3E-F
Intuitive Switch with 16 x RS232 ports, 3 x Ethernet Ports, 1 x Fibre connection and a 4-20mA Pressure Transducer connection.	PR0757-16P3E-F-PHI
Bluetooth RS232 Network Module	PR0630

Front Display Features

LED's: -

- Cooling (Relay 1 or 4) 
- Fans (Relay 2) 
- Lights (Relay 3) 
- Defrost (Relay 5) 
- On-Line 
- Off No network attached
- Flashing Attempting to Log on to network
- Steady On-line

 
Service (See Parameter 18 for setup) 

Alarm 

HACCP 



Keys

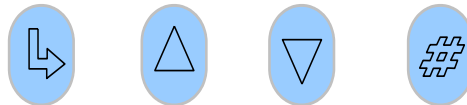

Enter Up Down Defrost

Note: Function keys illuminate when pressed, illumination is turned off 20 seconds after the key is used.

Defrost: Press and hold the defrost button to force a manual defrost

Main Display



4 character LED display, used to display temperature and status messages.




Please ensure all power is switched off before installing or maintaining this product.

Connections



Mercury Mk3 I/O Connections (PR0740)

Input and Output connections are made to the back of the controller, the RS232/ Ethernet communication port is on the side. The diagram below shows the connection detail. Inputs and outputs are assigned according to the chosen configuration. See [Input/Output](#) tables for further details on connections.

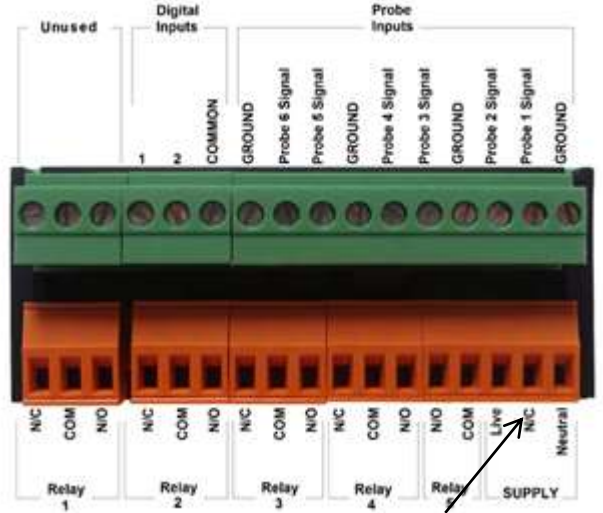

Note : On the supply, N/C equates to 'No Connection'

Mercury I/O Connections (PR0744)

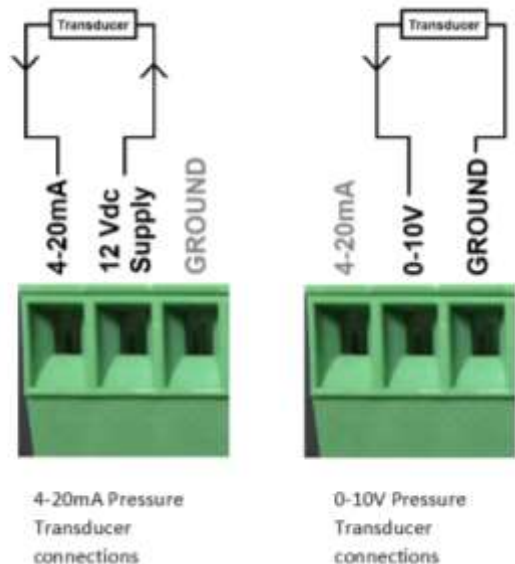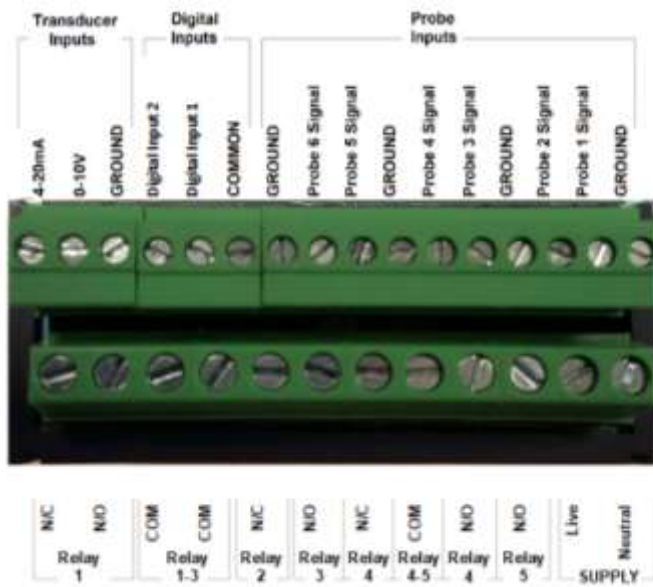


On the PR0744 variant the terminals are fixed and are not of the plug and socket type.



Please ensure all power is switched off before installing or maintaining this product.

Intuitive Mercury I/O Connections

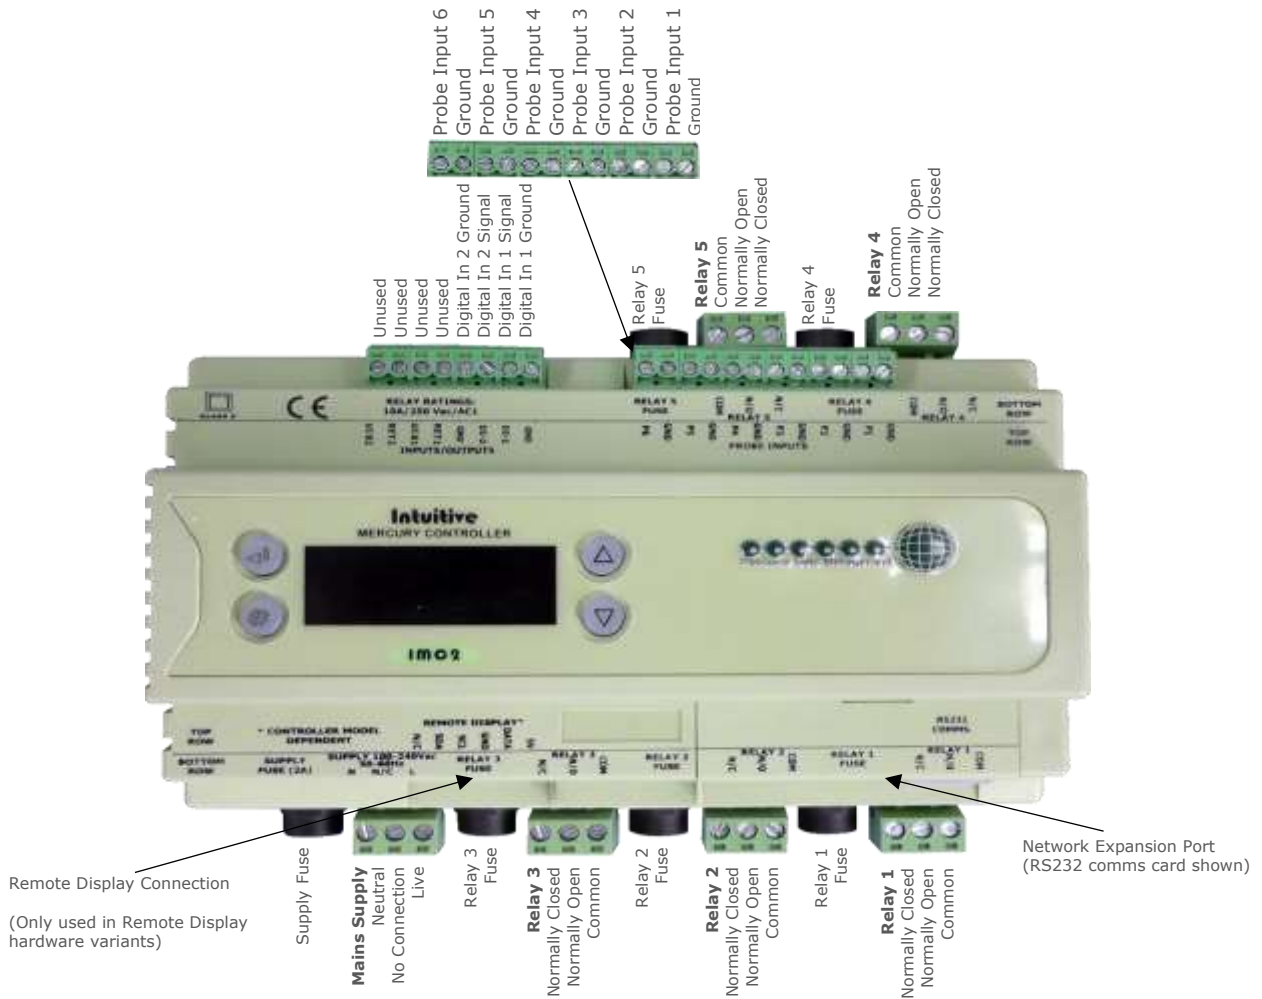

Intuitive Mercury Network Expansion

RS232 Network Card (Default)



The Intuitive Mercury is supplied with an RS232 Network Card fitted as standard.

IP Network Card (PR0770)



Rotary Address Switches
Network Collision LED
Network Activity LED

RS485 Network Card (PR0771)



Ground
B-
Ground
A+
Screen
Network Activity LED



Please ensure all power is switched off before installing or maintaining this product.

Input and Output Allocation Tables

The following tables indicate; on a controller type basis, the functions of the inputs and outputs. Also shown are the digital inputs that are derived by switching in a fixed value resistor across the input.

Input / Output allocation table

TYPE	Integral Case Types 1&2	Alarm Action	Plant Input (Switched Resistors)
Input 1	Air on Temperature	Yes	
Input 2	Air off Temperature	Yes	
Input 3	Compressor A Discharge Temperature	Yes	Plant fault 1 or External Defrost Input **
Input 4	Compressor B Discharge Temperature	Yes	Case Clean Switch
Input 5	Defrost Termination or Monitor probe (if used)	Conditional*	Plant fault 2
Input 6	Logging Probe (If fitted)	Conditional*	
Digital Input 1	Plant 1, Switch, Defrost, Plant 2	Conditional	
Digital Input 2	Plant 1, Switch, Defrost, Plant 2	Conditional	
Relay 1	Compressor A	N/A	
Relay 2	Fans	N/A	
Relay 3	Lights/Alarm Relay	N/A	
Relay 4	Compressor B	N/A	
Relay 5	Defrost Heater	N/A	

* Alarm on monitor probe only if used

** Defrost type must be set to remote in parameters.

Switched Resistor Values

For PT1000 probes use 820 Ohm switched resistors. For NTC2K, NTC2K25 and 3K probes use 590 Ohm switched resistors. For 5K and 6K use 1K Ohm switched resistors. For NTC10K probes use 2k7 Ohm switched resistors. For NTC10K (2) probes use 2k2 Ohm switched resistors. The resistors used must have a tolerance of 1% or better and the resistor must have a power rating of 0.25W. For improved accuracy whilst using switched resistors RDM recommend resistors with 0.1% accuracy are used. Note the switched resistor features will **not** function when using 470R or 700R probes. When a resistor is switched across the appropriate input it signals to the Mercury to enable the switched resistor function described for that input whilst still recording the probe temperature on the input.

Temperature range for all probe types is -49°C to +127°C for probe inputs which do not have a secondary function (switched resistors). Inputs which have a secondary function are restricted to -42°C to +60°C. If the full temperature range is required on all inputs and no switch resistor features are needed then please see Switch Resistor parameter P-19

Note: switched resistors will operate in LT (Low Temperature) and HT (High Temperature) applications using PT1000, NTC2K or NTC2K25 probe types only. For all other probe types, the switched resistor inputs will work in HT applications only.

Ordering Information

Mercury Mk3 Hardware

When ordering the Mercury 3 controller the following ordering scheme can be used to purchase the desired hardware configuration. This ensures the controller ships with the optional hardware pre-fitted.

PR0740 – X – Y – MOB Where **X** and **Y** is the selection from the tables below.

X	Description
232	RS232 Comms
IP	IP Interface

Y	Description
D	Local/ Integral Display
R	Remote Display

Example – To order a built in IP variant with a remote display, use the following part number: -

PR0740-IP- R – MOB



Please ensure all power is switched off before installing or maintaining this product.

Intuitive Mercury Hardware

When ordering a Mercury Intuitive controller, the following ordering scheme can be used to purchase the desired hardware configuration.

PR07X0 – Y – MOB – Z Where **X**, **Y** and **Z** is the selection from the tables below.

X	Description	Y	Description	Z	Description
5	Integral Display	Blank	Fused	Blank	RS232 Comms
6	Remote Display	NF	Non-Fused	IP	IP Comms
				485	RS485 Comms

Example:

To order an Intuitive Mercury non fused, with an integral display and IP comms:

PR0750-NF-MOB-IP

Setting up the controller

Access to the controller can be achieved several ways

- Through the front mounted buttons
- Direct access by PC into the side comms port. This requires the Communicator software package available free on the RDM website
- Through legacy front end panels on 485 networks
- Through the RDM Data Manager.
- Across an IP network. (Current controller IP address required)

Setup through front buttons



To enter setup mode, hold the Enter and Down buttons together for approximately 3 seconds until the message "Ent" appears on the display. Now press the Enter button again to enter the function menu. IO will be displayed. Scroll up or down to go through the list.

Setup Function Menu

Display	Option	Explained in Paragraph	Display	Option	Explained in Paragraph
IO	View Inputs / Outputs and States	Input / output table	SoFt	View software version	
PArA	Set/View Parameters	Set view parameters	FANS	Toggle Fans Only mode	Fans
Unit	Probe type and Celsius/Fahrenheit option	Set View Unit	CASE	Toggle Case Off mode	Case Off
PrES	Set/view pressure unit	Set Pressure Unit	Ligt	Toggle Lights Only mode	Lights
diSP	Display whole units or decimal	Display	OFSt	Probe Offset	Probe Offset
tyPE	Set/View Controller Type	Set/view controller type	tEst*	Test Mode	See Note Below
rtc	Set/view Clock (rtc = Real Time Clock)	Real Time Clock	ESC	Exit Setup mode	
nEt	Set/view network configuration	Network Configuration			

***Note:** When first powered up the controller will have the 'tEst' option in the menu setup. This allows the user to toggle the relays for testing purposes. Upon entering the menu, the display will show r-01 (relay 1) to r-05 (relay 5), select the desired output and toggle the value from 0 to 1 (confirm by pressing enter) to switch the selected relay.

This option is only available for 30 seconds after power up. After this time, the menu setup will return to its standard options.



Please ensure all power is switched off before installing or maintaining this product.

Recommended set-up method

If you are not connecting to a network and want to set up the controller through the buttons we recommend you use the following order from the function menu.

rtc. Real time clock (This will automatically synchronise on network systems)

- Use the up or down buttons to scroll through the display until the display reads "rtc"
- Press enter. The display will show "t-1". press enter again
- Scroll hours up or down (0 – 23) press enter
- Use up button to select "t-2", press enter
- Scroll minutes up or down (0 – 59) press enter
- Repeat for t - 3 (seconds 0 – 59)
- Repeat for t - 4 (days up to 31)
- Repeat for t - 5 (months up to 12)
- Repeat for t - 6 (year up to 99)
- Use up button to display "ESC", press enter to display "rtc"

Time clock is now set

type. Set/view controller type

- From the function menu scroll to select type, press enter
- Use the up/down buttons to scroll through HT/LT configuration types. (see [configuration table on page 4](#))
- Press enter.
- Scroll to select "ESC"
- Press enter

Controller type configuration is now set

PArA. Set/view parameters (This can be achieved at the network front end)

- From the function menu scroll to select PArA
- Pressing Enter while PArA is displayed will enter the parameter menu. The first parameter option will be displayed as P-01. Pressing the Up or Down button will present the other parameter options P-02, P-03 etc. See the parameter list below to find what parameter number corresponds to which actual parameter. Pressing the Enter button will show the current value of the selected parameter. Press Up or Down to modify the value and press Enter again to save the value. The parameter list number will be displayed again. Two other options are present in the parameter menu – dFLt and ESC. Selecting ESC will exit setup mode. Selecting dFLt will reset all parameters back to the default values for the current type of controller.

Unit. Set/view temperature unit and Probe type

From the function menu scroll to select Unit

Press enter and the value will be displayed: -

Probe Types

0 for PT1000 Celsius	10 for NTC2K25 Celsius
1 for PT1000 Fahrenheit	11 for NTC2K25 Fahrenheit
2 for NTC2K Celsius	12 for 5K Celsius
3 for NTC2K Fahrenheit	13 for 5K Fahrenheit
4 for 470R Celsius	14 for 6K Celsius
5 for 470R Fahrenheit	15 for 6K Fahrenheit
6 for 700R Celsius	16 for NTC10K T1 Celsius
7 for 700R Fahrenheit	17 for NTC10K T1 Fahrenheit
8 for 3K Celsius	18 for NTC10K T2 Celsius (USA NTC10K)
9 for 3K Fahrenheit	19 for NTC10K T2 Fahrenheit (USA NTC10K)

Use the up or down keys to select the units and press enter.

This function is now complete



Please ensure all power is switched off before installing or maintaining this product.

Display

From the function menu scroll to and select diSP. Press enter and one of the following values will be shown:

0. Controller display will show the whole number and tenths value of a temperature reading. (Default)
1. Controller display will show temperatures as a whole number.

Parameter Tables

Number	Parameter	Range °C (°F)	Step	Units	Default LT °C (°F)	Default HT °C (°F)
P-01	Cut-in Temp.	-42 to 30 (-43.6 to 86)	0.1	Deg	-20 (-4)	3.5 (38.3)
P-02	Cut In Differential	0 to 10 (0 to 18)	0.1	Deg	2.5 (4.5)	2.5 (4.5)
P-03	Control Weight	0 to 100	1	%	40	30
P-04	Display Weight	0 to 100	1	%	40	30
P-10	Alarm Weight	0 to 100	1	%	0	0
P-05	Lag Comp Delay	00:00 to 15:00	00:05	mm:ss	00:40	00:10
P-06	Anti SC Time	00:00 to 15:00	00:05	mm:ss	07:00	07:00
P-07	Lag Cut Out Diff	0 to 10 (0 to 18)	0.1	Deg	2.5 (4.5)	2.5 (4.5)
P-85	Key-switch Mode	0 = Case Off 1 = Fans only 2 = toggle	1		0	0
P-87	Control Probe type	0 = Use Air on Probe 1 = Use Log Probe	1		0	0
P-90	Resistor Case Off	0 (Disabled),1(Enabled)			0	0
P-92	Fans temperature mode	0 = Off 1 = Temperature 2 = Over-temperature 3 = Temp/OT	1		0	0
P-93	Fans Off Temperature	-42 to 30 (-43.6 to 86)	0.1	Deg	-10 (14)	8 (46.4)
P-15	Probe 5 Select	0 = Defrost, 1 = Monitor	1		0	0
P-16	Relay 3 Mode	0 = Lights, 1 = Alarm	1		0	0
P-29	Probe 3 Resistor function	0 = Plant fault, 1 = External defrost	1		0	0
P-18	Service Interval time	0 to 128	1	KHrs	60	60
P-19	Switch Resistors	0 (Off), 1(On)			1	1
P-98	Lights Case Off	0 (Off), 1 (On), 2 (Unused)			0	0
P-99	Load Shedding	0 (Off), 1 (Mode 1), 2 (Mode 2)	1		0	0
P-30	Do (enable) Discharge Stop Compressor A	0 (Off), 1(On)	1		0	0
P-31	Do (enable) Discharge Stop Compressor B	0 (Off), 1(On)	1		0	0
P-32	Discharge Stop Value	-49 to 128	0.1	Deg	55	55
P-33	Discharge Stop Differential	-42 to 30	0.1	Deg	10	10
P-34	Maximum Compressor Run Time	00:00 to 99:00	01:00	mm:ss	00:00	00:00
P-35	Comp Stop Both	0 = Yes 1 = No	1		0	0
P-100	Digital 1 Mode	0 =Plant 1 N/O 1 =Plant 1 N/C 2 =Case Switch 3 =Temp Switch	0		0	0



Please ensure all power is switched off before installing or maintaining this product.

Number	Parameter	Range °C (°F)	Step	Units	Default LT °C (°F)	Default HT °C (°F)
		4 =Defrost				
P-101	Digital 2 Mode	0 =Plant 1 N/O 1 =Plant 1 N/C 2 =Case Switch 3 =Temp Switch 4 =Defrost	0		0	0
P-102	Cut In Offset	-30 to +30 (-22 to 86)	1	Deg	5	5
P-103	Probe 5 Resistor	0 =Plant 4 N/O 1 =Plant 4 N/C 2 =None			2	0
P-20	Alarm Delay	00:00 to 99:00	01:00	mm:ss	20:00	20:00
P-21	UT Alarm	-49 to 60 (-56.2 to 140)	0.1	Deg	-30 (-22)	-2 (28.4)
P-22	OT Alarm	-49 to 60 (-56.2 to 140)	0.1	Deg	-15 (5)	5 (41)
P-23	Log Probe Type	0 (Off), 1 (Logging), 2 (Logging/Alarm)			Off	Off
P-24	Slug Log Probe	0 (Off), 1 (On)			Off	Off
P-25	Log Alarm Delay	00:00 to 99:00	01:00	mm:ss	20:00	20:00
P-26	Log UT Alarm	-49 to 60 (-56.2 to 140)	0.1	Deg	-35 (-31)	-1 (30.2)
P-27	Log OT Alarm	-49 to 60 (-56.2 to 140)	0.1	Deg	-12 (10.4)	6 (42.8)
P-28	Monitor OT Alarm	-49 to 60 (-56.2 to 140)	0.1	Deg	20 (68)	20 (68)
P-36	Probe 2 Alarm	0 = Off, 1 = On			1	1
P-40	Defrost Mode	0 (Local), 1 (Remote), 2 (External)			Local	Local
P-41	Defrost Start	00:00 to 23:59	00:01	hh:mm	01:00	01:00
P-42	Defrosts per Day	0 to 8	1		6	6
P-43	No Defrost Time	0 to 25	1	hours	12	12
P-44	Def Terminate Temp.	-42 to 30 (-43.6 to 86)	0.1	Deg	14 (57.2)	10 (50)
P-45	Def Min Time	00:00 to 99:00	01:00	mm:ss	05:00	05:00
P-46	Def Max Time	00:00 to 99:00	01:00	mm:ss	30:00	30:00
P-47	Drain Down	00:00 to 24:00	00:15	mm:ss	01:30	00:30
P-48	Recovery Time	00:00 to 99:00	01:00	mm:ss	30:00	30:00
P-89	Pump Down Time	00:00 to 99:00	01:00	mm:ss	00:00	00:00
P-86	Fan Delay mode	0 = Time 1 = Temp	1		0	0
P-49	Fan Delay Time	00:00 to 99:00	01:00	mm:ss	00:00	00:00
P-88	Fan Delay Temp	-42 to 30 (-43.6 to 86)	0.1	Deg	-20 (-4)	0.0 (32)
P-50	Fans In Defrost	0 (Off), 1 (On)			On	On
P-91	Defrost Type (Integral)	0 = Elec. 1 = Gas. 2 = Elec CIn			0	0
P-94	Defrost Hold	0 (Off), 1 (On)			Off	Off
P-95	Defrost Skip	0 (Off), 1 (On)			Off	Off
P-96	Defrost Skip Time	00:00 to 99:00	01:00	mm:ss	12:00	12:00
P-60	Lights Mode	0 (Local), 1 (Remote), 2 (Man Off), 3(Man On)			Local	Local
P-61	Sun Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-62	Sun Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00



Please ensure all power is switched off before installing or maintaining this product.

Number	Parameter	Range °C (°F)	Step	Units	Default LT °C (°F)	Default HT °C (°F)
P-63	Mon Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-64	Mon Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-65	Tue Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-66	Tue Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-67	Wed Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-68	Wed Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-69	Thu Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-70	Thu Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-71	Fri Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-72	Fri Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-73	Sat Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-74	Sat Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
dFLt	Restore defaults					

Parameter Descriptions

Number	Parameter	Description
P-01	Cut-in Temp	Temperature at which the lead compressor will switch on.
P-02	Diff	Differential temperature below the cut-in temperature. The lead compressor switches off when below this temperature
P-03	Control Weight	Percentage of the Air-On temperature that is used to calculate the control temp. The remaining percentage will be used on the Air-Off temperature Example, P-03 set to 30% Control temp = 30% Air-on + 70% Air-off
P-04	Display Weight	As above only applied to the display temperature
P-10	Alarm Weight	Percentage of the Air-On temperature that is used to calculate the over temperature alarm.
P-05	Lag Comp Delay	Delay before the second compressor is switched on if the temperature is still above set-point. Note – The lead and lag compressors swap after each defrost to even the run times.
P-06	Anti SC Time	Allows the user to set the compressor for a given number of starts/hour
P-07	Lag Cut Out Diff	Diff below the Cut-In Temp the lag compressor switches off. Single Compressor Operation To disable compressor B operation and use only a single compressor for control set parameter P-07 to 0. This will allow the controller work with just one compressor (A) and ignore compressor B.
P-85	Key-switch Mode	Allows the keys switch to be: - <ul style="list-style-type: none"> ➤ Single turn for case off (Case off mode) ➤ Single turn for Fans only (Fans Mode) ➤ Single turn for case off, double turn for fans only (Toggle mode)
P-87	Control Probe type	Switches between using the air-on probe and the Logging probe. Note the control and display temperature will still be a derivative of the weighted Average of the control probe + Air-off probe
P-90	Resistor Case Off	Turns on/off the switched resistor case off function
P-92	Fans temperature mode	Allows the user to set the fans to turn off when: - <ul style="list-style-type: none"> ➤ A pre-determined temperature is reached (P93) ➤ When an over-temperature alarm is present ➤ When either P93 is reached or an OT alarm is present
P-93	Fans Off Temperature	Temperature for the above (P92) operation. Note the defrost termination probe is the source of the temperature reading used in this feature. If the defrost termination probe isn't fitted then a similar process to P-44 is used.
P-15	Probe 5 Select	This input can be used as a defrost termination probe (default) or as a monitor probe with an OT alarm level (P-28)
P-16	Relay 3 mode	This changes the function of relay 3 from Lights (default) to an alarm relay. The alarm relay is energised for no alarm. Use the NC and Common for "Loop make" on alarm or use the NO and Common for "Loop break" on alarm.
P-29	Prb 1 or Prb 3 Resistor	Selects whether the switched resistor invokes either a Plant fault or an External Defrost.



Please ensure all power is switched off before installing or maintaining this product.

Number	Parameter	Description
P-18	Service Interval Time (Run Hours)	Time (in 1000 x hours) before the service icon (Spanner icon) comes on. The Run Hours timer increments based on the number of hours the controller has been powered up and running. Reset the spanner icon to off by changing this parameter to 0 and then back to the desired service interval. This process also resets the Run Hours value to 0. To view the current Run Time value refer to the I/O list.
P-19	Switch Resistors	Enables switched resistors to be used for Plant Faults, External Defrosts, Case Clean. See : Switched Resistor Values
P-98	Lights Case Off	Used to place the controller into Case Off when its lighting timer is in the off state. When the lighting timer is in the on state the controller follows its normal control operation. This feature is disabled if the set point (P-01) is below 6°C. Please note that when the controller is in case off all alarms are inhibited and all outputs are turned off. Therefore care must be taken when enabling this parameter. <ul style="list-style-type: none"> ➤ Off – Feature is not used and only the controller lights relay follows the lighting timer status. ➤ On - Feature is in use and controller will be in Case Off whenever the lights timer is in the off state. ➤ Unused – This selection has no effect and should not be used. Please select from either Off or On. This feature operates in either Local, using controller RTC, or Remote, using Data Manager GP timer channel, lighting applications.
P-99	Load Shedding	<ul style="list-style-type: none"> ➤ Off – Feature is not used ➤ Mode 1 – Case goes to “CO2 Load Shedding Case Off Mode” ➤ Mode 2 – Goes to Case Clean Mode See: Load Shedding
P-30	Do Discharge Stop Compressor A	This enables the discharge stop on compressor A, if set to ON then the compressor will be disabled if the discharge temperature is exceeded.
P-31	Do Discharge Stop Compressor B	This enables the discharge stop on compressor B, if set to ON then the compressor will be disabled if the discharge temperature is exceeded.
P-32	Discharge Stop Value	If a compressor discharge probe exceeds this value and P-30 and P-31 are set to ON then the relevant compressor will be disabled.
P-33	Discharge Stop Differential	This is the differential below the discharge stop value that the discharge probe temperature has to drop before the compressor is enabled again.
P-34	Maximum Compressor Run Time	This limits the running time of any compressor, once the compressor has exceeded this time period it will be switched off for the period of the anti-short cycle time (P-06)
P-35	Comp Stop Both	If either compressor stops due to expiry of the Maximum Compressor Run Time then both compressors will be disabled if P-35 is set to On.
P-100 / P-101	Digital 1 Mode / Digital 2 Mode	Sets the status input type for the two Digital Inputs; <ul style="list-style-type: none"> ➤ Plant 1/2 – When the DI is activated, it would alarm Plant Fault 1/2 (N/O or N/C) ➤ Case Switch – Would carry out the operation set on the ‘Key Switch mode’ (p-85) ➤ Temp Switch – Adds temperature setpoint offset value set in P-102 ➤ Defrost – The DI activation would signal the unit to go into a defrost (must be set to remote df).
P-102	Cut In Offset	The value added to the Cut-In Setpoint, OT and UT alarm thresholds when a temperature offset is applied. This can be done from a digital input set to ‘Temp Switch’ or via a Data Manager TDB command.
P-103	Probe 5 Resistor	Selects whether the switched resistor invokes either a Plant fault 4 N/O or N/C.
P-20	Alarm Delay	Delay for the over and under-temperature alarms
P-21	UT Alarm	Under temperature alarm set point. This alarm uses the control temperature.
P-22	OT Alarm	Over temperature alarm set point. This alarm uses the air-off temperature.
P-23	Log Probe Type	Allows the user to set the logging probe mode: - <ul style="list-style-type: none"> ➤ Off ➤ Logging with no alarms ➤ Logging with alarms
P-24	Slug Log Probe	Applies a damping factor. This can be used to make a standard probe have the same temperature response as a logging probe.
P-25	Log Alarm Delay	Delay for the Logging probe over and under-temperature alarms
P-26	Log UT Alarm	Logging probe under temperature alarm set point
P-27	Log OT Alarm	Logging probe over temperature alarm set point
P-28	Monitor OT Alarm	Monitor probe over temperature alarm set point
P-36	Probe 2 Alarm	Allows user to disable Probe 2 alarms if probe is not fitted.



Please ensure all power is switched off before installing or maintaining this product.

Number	Parameter	Description
P-40	Defrost Mode	Allows the user to set the defrost mode: - <ul style="list-style-type: none"> ➤ Local (Uses the internal parameters P-41 and P-42) ➤ Remote (Requires a defrost schedule in the front end) ➤ External (uses a switched resistor in input 3). When this signal is present a defrost is initiated. <p>Note: - If the external defrost signal is not removed then the controller will defrost according to the "No Defrost" time and a missed defrost alarm will be generated. See P-29 for external defrost signal setup.</p>
P-41	Defrost Start	When defrost mode is set to "Local", this is the start time for the 1 st defrost
P-42	Defrosts per Day	When defrost mode is set to "Local", this is the number of defrosts per day equally spaced from the start time.
P-43	No Defrost Time	If the controller misses a defrost command for any reason, a defrost will initiate after this time has elapsed from the last defrost. Normally set to 2 hours over the normal defrost interval period.
P-44	Def Terminate	The defrost will terminate (defrost control relay off) when the temperature of the defrost termination probe reaches this value, if a defrost probe is not fitted then the air off program will be used.
P-45	Def Min Time	Minimum time that a defrost will use (Defrost can't terminate until this time has elapsed. If termination temperature is reached during this period, the defrost control relay is turned off but the controller will not start refrigerating until the end of the defrost min period)
P-46	Def Max Time	Maximum time period allowed for defrosting if termination temperature is not reached.
P-47	Drain Down	A period after defrost max to allow the draining of any surplus water
P-48	Recovery Time	The compressor(s) is switched on at the start of this period to allow the temperature to recover to the normal operating point. This period also inhibits the OT alarm. Note that if the air-off temperature is still above the OT alarm setpoint when this period expires, an immediate OT alarm occurs; there is not a further alarm delay.
P-89	Pump Down Time	Time period before the defrost min period to allow for a pump down
P-86	Fan Delay mode	This parameter allows the fans start after a drain-down period to be delayed, either by time (P-49) or when the temperature point (P-88) is reached. This parameter uses the same probe strategy as the defrost terminate.
P-49	Fan Delay	Time after a drain-down period before the fans start if P-86 is set to time
P-88	Fan Delay Temp	Temperature at which the fans start after a drain-down period when P-86 is set to temperature.
P-50	Fans In Defrost	Allows the user to set the fans on or off in defrost. Note if the fans are set to on in defrost, they will go off for the drain-down period and then follow the P-86 rules.
P-91	Defrost Type	Electric – Defrost heater will go off during defrost min. period, if defrost termination is achieved, and will stay off. Electric CIn – Defrost heater will go off during defrost min. period if defrost termination is achieved but will then cycle on and off around the termination temperature setpoint until the end of the defrost min. period. Gas - If gas is selected, the compressor is kept running for the duration of the defrost cycle.
P-94	Defrost Hold	Turns the defrost hold feature on and off. When switched on, the controller can be held in defrost until a remote command from the front end starts the recovery process.
P-95	Defrost Skip	Allows user to enable/disable defrost skip. This feature allows the controller to skip defrosts. If the current defrost terminates on temperature then the controller will skip the next scheduled defrost providing the previous defrost terminated before the defrost skip time (P-96). Operates only when the controller is set to local defrost scheduling.
P-96	Defrost Skip Time	Time factor used in defrost skip. The previous defrost has to terminate before this value expires to allow the controller to skip a defrost.
P-60	Lights Mode	Allows the user to set the lights mode: - <ul style="list-style-type: none"> ➤ Always off ➤ Always on ➤ Use a local schedule P-61 to P-74) ➤ Use a remote schedule (Set up in the system front end)
P-61	Sun Lights On	When P-60 is set to Local, Sunday on time
P-62	Sun Lights Off	When P-60 is set to Local, Sunday off time
P-63	Mon Lights On	When P-60 is set to Local, Monday on time
P-64	Mon Lights Off	When P-60 is set to Local, Monday off time
P-65	Tue Lights On	When P-60 is set to Local, Tuesday on time



Please ensure all power is switched off before installing or maintaining this product.

Number	Parameter	Description
P-66	Tue Lights Off	When P-60 is set to Local, Tuesday off time
P-67	Wed Lights On	When P-60 is set to Local, Wednesday on time
P-68	Wed Lights Off	When P-60 is set to Local, Wednesday off time
P-69	Thu Lights On	When P-60 is set to Local, Thursday on time
P-70	Thu Lights Off	When P-60 is set to Local, Thursday off time
P-71	Fri Lights On	When P-60 is set to Local, Friday on time
P-72	Fri Lights Off	When P-60 is set to Local, Friday off time
P-73	Sat Lights On	When P-60 is set to Local, Saturday on time
P-74	Sat Lights Off	When P-60 is set to Local, Saturday off time
dFLt	Restore default values	Restores all of the parameters to their default values.

Relay State and functional operation (all variants except PR0744)

Relay 1-3 State	Function State	Wired contact
Relay 1 off	Compressor A on	N/C
Relay 1 on	Compressor A off	N/C
Relay 2 off	Fans on	N/C
Relay 2 on	Fans off	N/C
Relay 3 off	Lights on	N/C
Relay 3 on	Lights off	N/C

Relay 4-5 State	Function State	Wired contact
Relay 3 off	Alarm Relay = Alarm	N/O
Relay 3 on	Alarm Relay = OK	N/O
Relay 4 off	Compressor B off	N/O
Relay 4 on	Compressor B on	N/O
Relay 5 off	Defrost control off	N/O
Relay 5 on	Defrost control on	N/O

Relay State and functional operation (PR0744 variant only)

Relay 1-3 State	Function State	Wired contact
Relay 1 off	Compressor A on	N/C
Relay 1 on	Compressor A off	N/C
Relay 2 off	Fans on	N/C
Relay 2 on	Fans off	N/C
Relay 3 off	Lights on	N/O
Relay 3 on	Lights off	N/O

Relay 4-5 State	Function State	Wired contact
Relay 3 off	Alarm Relay = Alarm	N/O
Relay 3 on	Alarm Relay = OK	N/O
Relay 4 off	Compressor B off	N/O
Relay 4 on	Compressor B on	N/O
Relay 5 off	Defrost control off	N/O
Relay 5 on	Defrost control on	N/O

Relay and screen states during defrost

State:	Pump Down	Defrost Min	Defrost Max	Drain Down	Fan Delay	Recovery
Screen:	DEF	DEF	DEF	DEF	DEF	REC
Def LED:	On	On	On	Off	Off	Off
RLY 1 Comp A (Defrost set to gas)	Off	On	On	Off	On	On
RLY 1 Comp A (Defrost set to electric)	Off	Off	Off	Off	On	On
RLY 1 Comp A (Defrost set to elec/cln)	Off	Off	Off	Off	On	On
RLY 4 Comp B	Off	Off	Off	Off	On if Reqd	On if Reqd
RLY 5 Defrost Relay	Off	Off/Cycles*	On	Off	Off	Off
RLY 3 Lights relay (Timer channel On)	On	On	On	On	On	On
RLY 2 Fans (On in DF)	On	On	On	On	Off	On
RLY 2 Fans (Off in DF)	Off	Off	Off	Off	Off	On

*The defrost relay will cycle around the termination setpoint during defrost min if defrost type is set to elec/cln, otherwise it will be off.



Please ensure all power is switched off before installing or maintaining this product.

Defrost Type (P-91)

If P-91 is set to gas, compressor A is switched on for the duration of the defrost cycle.

Defrost Termination

Defrost termination will be when the temperature parameter "def terminate" has been reached on the "defrost termination" probe. If the "defrost termination" probe is not fitted then the air off probe will be used.

Fan Delay after Defrost

The fans will come back on when: -

- The fan delay time has elapsed if the "fan delay mode" is set to time
- Or If the fan delay mode is set to "temp", the fans will come on when the defrost termination probe reaches the fan delay set point, or on the time parameter, whichever occurs first.

If the "defrost termination" probe is not fitted, the fans will come on when the air off probe reaches the control set point (If fans are selected as "on during defrost")

Network Configuration – RS232 comms

The final section to setup is the network address. In all instances, this must be done before the controller is connected to the site network.

When logging a Mercury 3 or Intuitive Mercury with an RS232 interface onto a network you must first connect the controller to a communications module, this is either a 485 Legacy, IP Futura or Mercury Switch. For Mercury 3's with the IP interface please refer to the [Network Configuration – IP comms](#) section for details of networking.

RS485 Legacy module / Intuitive Internal RS485 Network card

Using RS485, the controllers have an auto-initialise function, which will automatically log the device onto the site network. If the wrong address has been entered onto the network, you will have to reset the controller address by setting the address to 00-0, and then re-enter the correct address (you may have to deregister the wrong address from the home system as well).

Connecting an RS485 legacy Module or an Intuitive Internal RS485 network card to the controller will govern which set-up screens are made available in the '**Net**' menu. Both modules will support the "Genus" protocol only. Using RS485 will show the below;

Display	Option
485t	1: 485 Genus Network 2: Bluetooth (See Bluetooth Network module)
485A	485 Address/ Name
gAdd	Show underlying network address assigned to controller
rLog	Re-log the controller back onto the network
ClrA	Clear the address/name from the controller
ESC	Exit network menu. N.B. this option must be selected to save any changes made in this menu

The **485t** option shows a value representing the network type. This can only be set to '1':

Value	Network Type
1	Genus compatible (all versions)

Ensure option '1' is selected (for RS485).

The **485A** option shows a value representing the name of the controller in a Genus compatible network. For example, if the value shown in 485A is shown as "05-6". The controller would try to log onto a Genus compatible network using the name 'RC05-6'.

The **gAdd** option displays (in hexadecimal format) the underlying network address assigned to the controller when it was logged onto the network. Note: this is automatically assigned by the Data Manager.



Please ensure all power is switched off before installing or maintaining this product.

The **rLog** option allows the controller to be logged back onto the network with its current name. The 'rLog' message will flash, waiting for confirmation. To confirm, press the Enter button to execute the command, Up or Down buttons to cancel.

The **CLrA** option will clear out the network address and name in the controller. The 'CLrA' message will flash for confirmation. Press the Enter button to execute the command, Up or Down buttons to cancel.

Fast Network Address Reset

To enter this mode, hold the Enter, Up and Down buttons together for approximately 3 seconds until the message CLrA appears on the display. CLrA is the first option in the menu consisting of the following options:

Display	Option
CLrA	Clear the address/name from the controller
ESC	Exit Setup mode

Pressing the Enter button to select the CLrA option will cause the 'CLrA' message to flash for confirmation, if the network type is set to Genus compatible. Press the Enter button to execute the command, Up or Down buttons to cancel. If the network type is not set to Genus compatible then the CLrA message will not flash and the ESC option can be used to exit the menu.

IP Futura module & Intuitive Internal IP Network card

In an IP system there are two options;

- IP-L
- IP-r

IP-L allows you to fix a static IP address into the controller, which you would use when you are connecting the controllers onto a customer's local area network. This would allow the customer to view each controller using a generic Internet browser.

IP-r allows you to give each controller on the system a unique number (using the rotary switches). This number is then allocated a dynamic IP address by the system's DHCP server (such as the RDM Data Manager).

IP-L

To configure the communication module or network card for IP-L, set all three rotary switches to zero. The module should then be connected to the controller. In the case of an Intuitive Mercury controller where the network card is already fitted, the controller should be powered off, all three rotary switches set to zero and the controller powered on.

- From the function menu you can now select '**nEt**'.
- Press enter and the display will show "IP-L", press enter once more.
- You can now set the IP network settings by using the table below

Display	Option
IP-1	IP Address byte 1
IP-2	IP Address byte 2
IP-3	IP Address byte 3
IP-4	IP Address byte 4
nL	Network Mask Length
gt-1	Gateway Address byte 1
gt-2	Gateway Address byte 2
gt-3	Gateway Address byte 3
gt-4	Gateway Address byte 4
ESC	Exit network menu. N.B. this option must be selected to save any changes made in this menu



Please ensure all power is switched off before installing or maintaining this product.

IP-r

To configure the communication module for IP-r, set the three rotary switches to give each controller a unique identifier. The module should then be connected to the controller and the network. The controller should then be powered on to connect to the network. In the case of an Intuitive Mercury controller where the network card is already fitted, the three rotary switches must be set when the controller is powered off, then power up before connecting to the network.

- From the function menu you can now select 'nEt'
- Press enter and the display will show "IP-r", press enter once more.
- You can now view (only) the address given by the DHCP server

Network Mask Length

To ease setup, a single network mask length value is used. If the address has been specified with a network mask value in dotted IP format e.g. 255.255.255.0 then the table below gives the conversion:

Mask	Length	Mask	Length	Mask	Length
		255.255.254.0	23	255.254.0.0	15
255.255.255.252	30	255.255.252.0	22	255.252.0.0	14
255.255.255.248	29	255.255.248.0	21	255.248.0.0	13
255.255.255.240	28	255.255.240.0	20	255.240.0.0	12
255.255.255.224	27	255.255.224.0	19	255.224.0.0	11
255.255.255.192	26	255.255.192.0	18	255.192.0.0	10
255.255.255.128	25	255.255.128.0	17	255.128.0.0	09
255.255.255.0	24	255.255.0.0	16	255.0.0.0	08

Mercury Switch

The method of logging on the Mercury 3 and Intuitive Mercury (RS232 comms) will be similar to that of the IP Futura however please refer to the Mercury Switch user guide, which can be obtained from the RDM website, for information regarding connecting a controller to a network.

Network Configuration – IP comms

Mercury 3 controllers with the IP interface as standard does not require any communications module and will already communicate on the IP network protocol.

When networking the Ethernet variant, the 'Net' menu will have the following menus:

Display	Option
IP-L / IP-r	Read/ Write Static IP address / Read Only DHCP IP address
Id	The 3 digit network address
AtyP	IP-r / IP-L selection
ESC	Exit Menu

Similar to the IP Futura / switch setup IP-L allows you to fix a static IP address into the controller and IP-r allows you to give each controller on the system a unique network number (using the Id).

- To firstly select between IP-L and IP-r navigate to 'AtyP'.

IP-r

Once IP-r is selected the controller must be given a unique 3 digit 'network address' that no other device on the network has (note if logging on to a Data Manager, this will be the device ID). Once the ID has been set connect the controller to the IP network for it then to be given an IP address by the DHCP server. To view the IP address given, within the Net menu, navigate to 'IP-r'.



Please ensure all power is switched off before installing or maintaining this product.

IP-L

If IP-L has been selected from the 'AtyP' menu the IP address must be given to the controller by navigating to 'IP-L' within 'Net'. The following menu's will be available:

Display	Option
IP-1	IP Address byte 1
IP-2	IP Address byte 2
IP-3	IP Address byte 3
IP-4	IP Address byte 4
nL	Network Mask Length (see the network mask length table above)
gt-1	Gateway Address byte 1
gt-2	Gateway Address byte 2
gt-3	Gateway Address byte 3
gt-4	Gateway Address byte 4
ESC	Exit network menu. N.B. this option must be selected to save any changes made in this menu

Once the IP address has been entered, the controller can be connected to the IP network.

Bluetooth Network module

Connecting a Bluetooth Network Module to the controller will update the screens available under the 'Net' menu. They are detailed below:

Display	Option
485t	1: 485 Genus Network (See RS485 module/ Intuitive Internal RS485 Network card) 2: Bluetooth
485A	Bluetooth device name. As it will appear on DMTouch's device list (RC00-0 – RC99-9)
nI d	Select Bluetooth Network ID (0 – 4)
gAdd	Shows underlying network address assigned to controller
rLog	Re-log the controller back onto the network
ClrA	Clear the address/ name from the controller
ESC	Exit network menu. Note: this option must be selected to save any changes made in this menu.

- Ensure the 485t is set to '2' (Bluetooth)
- Provide a unique device alias under the 485A menu (e.g. 01-5)
- Select the Network ID. Please see the Bluetooth wireless mesh setup guide for more details.
- Press the 'ESC' to save

The green network LED will flash to show it is attempting to log on and go solid when connected.

Viewing

Apart from setting up the controller, you can also view the status of the inputs and outputs and controller states. From the function menu, select "I/O", press enter. You can now scroll through the IO table as set out below. Inputs and outputs that do not apply to a particular controller type will be greyed out.



Please ensure all power is switched off before installing or maintaining this product.

Input / Output Table

Number	IO	Range* °C (°F)	Step	Units
I-01	Control Temp.	-42 to 60 (-43.6 to 140)	0.1	Deg
I-02	Display temp	-42 to 60 (-43.6 to 140)	0.1	Deg
I-03	Air on Probe	-49 to 60 (-56.2 to 140)	0.1	Deg
I-04	Air off Probe	-49 to 60 (-56.2 to 140)	0.1	Deg
I-05	Comp A Discharge Probe	-42 to 60 (-43.6 to 140)	0.1	Deg
I-06	Comp B Discharge Probe	-42 to 60 (-43.6 to 140)	0.1	Deg
I-08	Logging Probe	-49 to 60 (-56.2 to 140)	0.1	Deg
I-09	Defrost Probe	-49 to 60 (-56.2 to 140)	0.1	Deg
I-10	Alarm Temp	-49 to 60 (-56.2 to 140)	0.1	Deg
I-11	Plant Fault 1	0 (OK), 1 (Alarm)		
I-15	Plant Fault 2	0 (OK), 1 (Alarm)		
I-18	Plant Fault 3	0 (OK), 1 (Alarm)		
I-20	Plant Fault 4	0 (OK), 1 (Alarm)		
I-30	Case Clean	0 (Off), 1 (On)		
I-31	Monitor Probe	-49 to 60 (-56.2 to 140)	0.1	Deg
I-32	External Defrost	0 (Off), 1 (On)		
I-33	Load Shedding	0 (Off), 1 (On)		
O-03	Compressor A	0 (Off), 1 (On)		
O-04	Compressor B	0 (Off), 1 (On)		
O-05	Defrost Control	0 (Off), 1 (On)		
O-06	Lights	0 (Off), 1 (On)		
O-07	Case Fans	0 (Off), 1 (On)		
O-10	Last Def. Time	00:00 to 23:59		hh:mm
O-11	Last Def. Length	00:00 to 03:00		hh:mm
O-12	Last Def. Ctrl Temp.	-42 to 60 (-43.6 to 140)	0.1	Deg
O-13	Last Def. Type	0 (None), 1 (Internal), 2 (External), 3 (Network), 4 (Display), 5 (Timed) 6 (Forced), 7 (Skipped)		
O-16	Alarm Relay	0 (Unused), 1 (OK), 2 (Alarm)		
O-18	Run Time	0 – 128 K Hours	1	
O-30	Set Point Offset	-49 to 60 (-56.2 to 140)	0.1	Deg.
S-01	Control State	0 (Stabilise),1 (Normal), 2 (Defrost Min), 3 (Defrost Max), 4 (Drain Down), 5 (Fan Delay), 6 (Recovery), 7 (OT Alarm), 8 (UT Alarm), 9 (Fans Only), 10 (Lights Only),11 (Case Off), 12 (Pump Down),13 (Defrost Hold), 14 (Load Shed)		

* Range is dependent on probe type

Maximum and Minimum Control Temperature

To view the maximum or minimum Control Temperature the controller has reached since last power off/on press and hold the Up and Down Buttons together for 3 seconds. The display will show "diSP", press the Up Button to view the maximum Control Temperature the controller has reached or press the Down Button to view the minimum Control Temperature the controller has reached.

Display will revert back to normal operation if the Enter Button is pressed or after 1 minute of no button presses. The top bar of the left hand segment will be lit when the maximum temperature is being displayed. The bottom bar of the left hand segment will be lit when the minimum temperature is being displayed. Resetting the controller will clear out these values.



Please ensure all power is switched off before installing or maintaining this product.

Messages

Display Message	System status
Ft	Control Fault
Prb1	Probe 1 Fault
Prb2	Probe 2 Fault
Prb3	Probe 3 Fault
Prb4	Probe 4 Fault
Prb5	Probe 5 Fault
Prb6	Probe 6 Fault
rEC	Control State in Recovery
dEF	Control Sate in Defrost

Display Message	System status
FAnS ONLY	Controller in Fans Only
LitS ONLY	Controller in Lights Only
CASE OFF	Controller in Case Off
Ot	Over Temperature Alarm
Ut	Under Temperature Alarm
PLnt	Plant Fault
LgOt	Log Probe Over Temperature
LgUt	Log Probe Under Temperature
AL	Control State in Alarm

The following alarms and messages can appear on the Mercury display.

Network Alarms

The table below shows the text and associated type number that is sent to the system "front end". The type number is normally used to provide different alarm actions.

Alarm text	Type # (index)
Missed defrost	15
Plant Fault 1	3
Case over temperature	4
Case under temperature	5
Probe 1,2,3,4,5 or 6 Faulty	6
Product over temperature	8
Product under temperature	9

Alarm text	Type # (index)
Plant Fault 2	3
Monitor Probe OT	12
Case Off	29
Load Shedding	7
Compressor A stop	3
Compressor B stop	3

Modifying controller states

During normal operation you can change the following states from the function menu

Fans Only "FAnS"

Selecting the Fans Only option will put the controller into the Fans Only state if the current state is not Fans Only. If the current state is Fans Only then the controller will change to the Normal state. Selecting this option will exit the setup menu automatically. The display will show "FAnS OnLy"

If a remote display with key switch is being used, this function can be invoked by turning the key switch to the fans only position (90 degrees clockwise) with parameter P85 set to "fans"

Case Off "CASE"

Selecting the Case Off option will put the controller into the Case Off state if the current state is not Case Off. If the current state is Case Off then the controller will change to the Normal state. Selecting this option will exit the setup menu automatically. The display will show "CASE OFF". An alarm is generated, fixed delay of 1 minute, when the controller is placed into the Case Off state.

If a remote display with key switch is being used, this function can be invoked by turning the key switch to the case-off position. (Clockwise 90 degrees) with parameter P85 set to "case".

Lights Only "Ligt"

Selecting the Lights Only option will put the controller into the Lights Only state if the current state is not Lights Only. If the current state is Lights Only then the controller will change to the Normal state. Selecting this option will exit the setup menu automatically. The display will show "LitS OnLy"

Note. When lights are being used in "Remote" mode with a timing channel: -

If the controller goes offline, the lights are turned ON after a delay of 5 minutes. The lights will stay on until the controller comes back on-line where they will revert to the state of the timing channel being used.



Please ensure all power is switched off before installing or maintaining this product.

Probe Offset

This feature allows each probe value to be modified by an "offset". Offset values are from -10°C (-18°F) to +10°C (+18°F) and on a channel basis. Example C1 = Probe 1.


Remote Commands

The following commands can be used by a Data Builder program:

Command	Value to send	Description	Conditions
Defrost Command	1	Initiates a defrost cycle	Defrost mode: remote
Defrost Command	3	Terminates the defrost	Defrost mode: remote Defrost hold: On Defrost min state complete
Setpoint Command	+/-18	Is added to or subtracted from the setpoint	
Case Off Command	5 0	Sets the controller to Case Off Restores the controller from Case Off to Normal	
Haccp Command	0 1 2	HACCP LED OFF HACCP LED On HACCP LED Flashes	
Button Command	0 1 2	Buttons backlights Off Buttons backlights On Buttons Backlights Flash	

Use an "Analogue Out" block configured to the controller name and in the value field type in the command you require. Use a "Setting block" as the input to the "Analogue Out" block to send the Value.

See Example on the right, which increases the setpoint by 10 degrees.

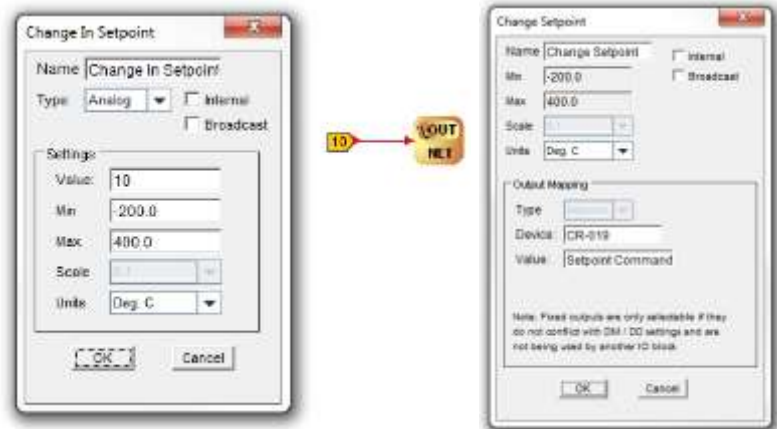

Please ensure all power is switched off before installing or maintaining this product.

Specification

	Mercury Mk3 Mobile Controller PR0740 MOB & PR0744 MOB	Intuitive Mercury Mobile Controller PR075X MOB & PR076X MOB
Power requirements		
Supply Voltage Range	100 – 240 Vac ±10%	100 - 240 Vac ±10%
Supply Frequency	50 – 60 Hz	50 - 60 Hz
Maximum supply current	5.2 Amps (when relay 5 is fully loaded)	2 Amps
Typical supply current	<1 Amp	<1 Amp
General		
Operating temperature range	-10°C to 60°C (14°F to 140°F)	-10°C to +60°C
Storage temperature range	-20°C to 65°C (-4°F to 149°F)	-20°C to +65°C
Environmental	Indoor use at altitudes up to 2000m, pollution degree 1, installation category II. Voltage fluctuations not to exceed ±10% of nominal voltage.	Indoor use at altitudes up to 2000m, pollution degree 1, installation category II. Voltage fluctuations not to exceed ±10% of nominal voltage.
Size	78mm (W) x 36mm (H) x 110mm (D)	157mm (W) x 67mm (H) x 120 (D)
Approx Weight	177 grams	500 grams
Safety	EN61010	EN61010
EMC	EN61326; 2013	EN61326; 1997 +Amdt. A1; 1998
Ventilation	There is no requirement for forced cooling ventilation	There is no requirement for forced cooling ventilation
Class 2 Insulation	No protective Earth is required and none should be fitted	No protective Earth is required and none should be fitted
Supply Fuse	The host equipment must provide a suitable external over-current protection device such as: - Fuse: 2A 240 Vac Anti-surge (T) HRC conforming to IEC 60127	Built in fuse holder, fuse 2A 240Vac Anti-surge (T) HRC conforming to IEC60127, 32 x 6.3mm
Or MCB	2A, 240 VAC Type C conforming to BS EN 60898	2A, 240 VAC Type C conforming to BS EN 60898. Note: device has integral 2A fuse
Relay Fuse	Not Fitted	10A 240Vac Anti-surge (T) HRC conforming to IEC60127, 32 x 6.3mm
Relay Specification		
	Relay 1 – 4	Relays 1 - 5
Max current	PR0740 Only 6A Resistive (CosØ = 1) 2A Inductive (CosØ = 0.4)	10A Resistive (CosØ = 1) 3A Inductive (CosØ = 0.4)
Max current	PR0744 Only 5A Resistive (CosØ = 1) Derated from 5A to 3A linearly from 35°C to 55°C 2A Inductive (CosØ = 0.4) Conforms to EN60079-0 and EN60069-15	
Max voltage	250Vac, 30V dc	250Vac. 30V dc
Relay Fuse	N/A	10A 240Vac Anti-surge (T) HRC conforming to IEC60127, 32 x 6.3mm
	Relay 5	
Max current	3A (non-inductive), COSφ=0.4 2A (inductive load) 200,000 operations	
Max voltage	250Vac (Internal supply)	
For compliance with the LVD, relays 3, 4 and 5 commons must be at the same potential as the supply voltage		
Safety	Conforms to EN60730-1 based on UL 60950-1; UL 62368-1 as referenced to IEC60730-1	
Inputs		




Please ensure all power is switched off before installing or maintaining this product.

Probe Input resistance	3.01K Ohms (for PTC or NTC type probes)	3.01K Ohms (for PTC or NTC type probes)
Probe Input type	Selectable. See: Units	Selectable. See: Units
Digital Inputs	Volt Free	Volt Free
Comms		
Serial Variant	RS232 with flow control	RS232 with flow control
Ethernet Variant	IP comms	IP comms


Switched Resistor Example Wiring

Example of resistor fitted on a probe input. Connect to remote switch or relay

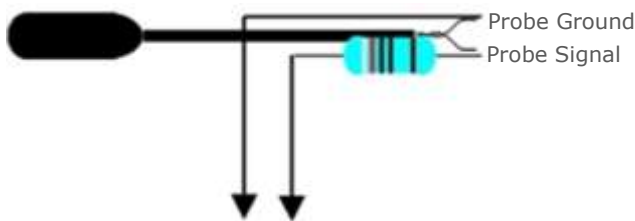

Installation & Dimensions

Panel Cut-out and Clearances

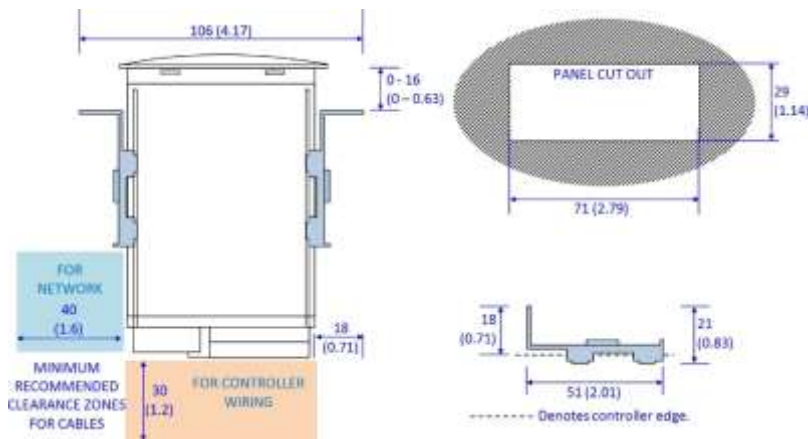

Fixing


The controller is fixed by sliding the 2 plastic retaining clips up to rear of the panel. These clips have a ratchet action and can be removed by holding in the clip sides and sliding back.

There is no requirement for forced cooling ventilation.




Please ensure all power is switched off before installing or maintaining this product.

Dimensions – Mercury Mk3

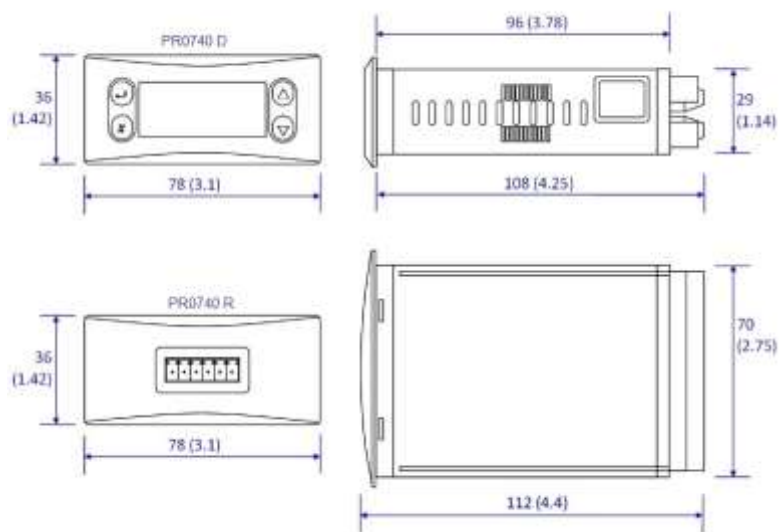


Dimensions – Intuitive Mercury Controller

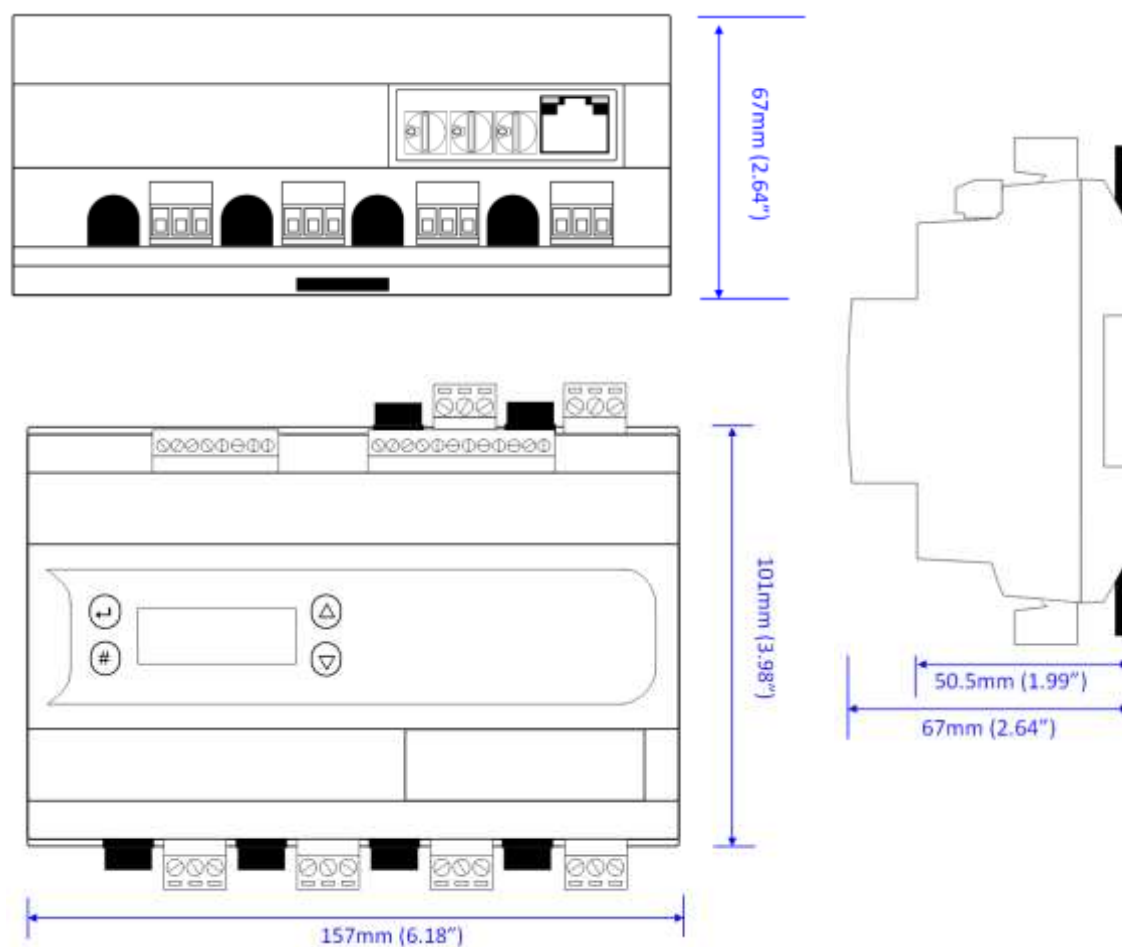

Please ensure all power is switched off before installing or maintaining this product.

Intuitive Mercury Mounting Instructions

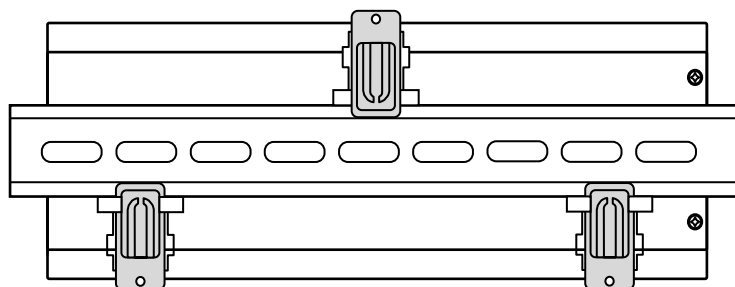

Three clips fix the Intuitive Mercury securely to DIN rail. Pull each clip until it “clicks” to remove the controller. Each clip has a mounting hole to provide an alternative mechanism to DIN mounting.

Cleaning

Do not wet the controller when cleaning. Clean the front by wiping with slightly dampened lint free cloth.

Appendix 1: Webpage Appearance

It is possible to view the controller across an IP connection using one of the methods outlined in the [Network Configuration](#) section

The following screens are samples of how values and settings appear when viewed through a PC/Laptop connection.

Mobile Controller (HT)
Mercury3a Mobile 3.4

Time 11:10:21 21/07/20

Current Status

Control temp.	16.9	°C
Control State	OT Alarm	

Current Alarms

Case over temperature	09:48:49 21/07/20
-----------------------	-------------------

The user has a choice of entering the following pages: - **Inputs & Outputs, Parameters, Alarms, Logs & Configure.**



Please ensure all power is switched off before installing or maintaining this product.

Inputs & Outputs

Inputs			Outputs			States	
Control temp.	16.9	°C	Compressor A	On		Control State	OT Alarm
Display temp.	16.9	°C	Compressor B	On			
Air on Probe	16.9	°C	Defrost Control	Off			
Air off Probe	17.0	°C	Lights	On			
Comp A Disch	N/A	°C	Case Fans	On			
Comp B Disch	N/A	°C	Last Def. Time	00:00	hh:mm		
Defrost Probe	N/A	°C	Last Def. Length	00:00	hh:mm		
Logging Probe	N/A	°C	Last Def. Temp.	0.0	°C		
Alarm temp.	17.0	°C	Last Def. Type	None			
Plant Fault 1	OK		Setpoint Offset	N/A	°C		
Plant Fault 2	OK		Alm Relay	Unused			
Plant Fault 3	OK		Run Time	0	K Hrs		
Plant Fault 4	OK						
Case Clean	Off						
Monitor Probe	N/A	°C					
Ext Defrost	Off						
Load Shed	Off						

This is view only screen and shows the states of the inputs and outputs.

Parameters

Parameters		
Control Compressor Alarms Defrost Lights		
Parameter Name	Value	Units
Cut-in temp	3.5	°C
Cut-in diff.	2.5	°C
Control weight	30	%
Display weight	30	%
Alarm weight	0	%
Key Switch	KeyOff	
Ctrl Probe Type	Air Probe	
Resistor Case Off	Off	
Fans Temp Mode	Off	
Fans Off Temp	8.0	°C
Probe 5 Select	Defrost	
Relay 3 Mode	Lights	
Probe 3 Resistor	PInt3 NO	
Service Time	60	K Hrs
Switch Resistors	On	
Lights CaseOff	Off	
Load Shedding	Off	
Digital 1 Mode	PInt1 NO	
Digital 2 Mode	PInt2 NO	
Cut-in Offset	5.0	°C
Probe 5 Resistor	PInt4 NO	

This is a view only screen and shows the parameter settings.



Please ensure all power is switched off before installing or maintaining this product.

Alarms

Alarms		
Reason	Occurred	Cleared
Case over temperature	09:48:49 21/07/20	
Probe Fault 6	09:09:58 20/07/20	09:18:49 21/07/20

This is a view only screen showing the alarm log.

Logs

Logs								
	11:11:45 21/07/20	11:11:50 21/07/20	11:11:55 21/07/20	11:12:00 21/07/20	11:12:05 21/07/20	11:12:10 21/07/20	11:12:15 21/07/20	11:12:20 21/07/20
Air off Probe	17.0	17.0	17.0	17.0	17.0	17.0	17.0	17.0
Comp A Disch	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Logging Probe	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Alarm temp.	17.0	17.0	17.0	17.0	17.0	17.0	17.0	17.0
Compressor A	On	On	On	On	On	On	On	On

This is a view only screen showing the device's log.

Configure

Alternatively, click on the **Configure** button to access the setup menu.

Note: login credentials required to access Configure menu are as follows;

Username: 'service'

Password: '1234'

Configure

-
-
-
-
-
-
-
-
-
-
-

This screen allows the user to configure the controller and set-up the following: - Time, Parameters, Controller Type, Temperature Units, Pressure Units, Display Units, Remote Defrost, Name, Logging, Asset Information and Probe Offsets.



Please ensure all power is switched off before installing or maintaining this product.

Time

Time

Enter time:

Enter the time and date in the format displayed and press "Set Time" to update the controller. A screen showing the set time will be displayed, and then revert to the initial (Home) screen.

Parameters

Set Parameters

Use Set Parameters button to save changes before changing section

Control
Compressor
Alarms
Defrost
Lights

Parameter Name	Low	High	Default	Value	Units
Cut-in temp	-42.0	30.0	3.5	<input type="text" value="3.5"/>	°C
Cut-in diff.	0.0	10.0	2.5	<input type="text" value="2.5"/>	°C
Control weight	0	100	30	<input type="text" value="30"/>	%
Display weight	0	100	30	<input type="text" value="30"/>	%
Alarm weight	0	100	0	<input type="text" value="0"/>	%
Key Switch				<input type="button" value="KeyOff"/>	
Ctrl Probe Type				<input type="button" value="Air Probe"/>	
Resistor Case Off				<input type="button" value="Off"/>	
Fans Temp Mode				<input type="button" value="Off"/>	
Fans Off Temp	-42.0	30.0	8.0	<input type="text" value="8.0"/>	°C
Probe 5 Select				<input type="button" value="Defrost"/>	
Relay 3 Mode				<input type="button" value="Lights"/>	
Probe 3 Resistor				<input type="button" value="Plnt3 NO"/>	
Service Time	0	128	60	<input type="text" value="60"/>	K Hrs
Switch Resistors				<input type="button" value="On"/>	
Lights CaseOff				<input type="button" value="Off"/>	
Load Shedding				<input type="button" value="Off"/>	
Digital 1 Mode				<input type="button" value="Plnt1 NO"/>	
Digital 2 Mode				<input type="button" value="Plnt2 NO"/>	
Cut-in Offset	-30.0	30.0	5.0	<input type="text" value="5.0"/>	°C
Probe 5 Resistor				<input type="button" value="Plnt4 NO"/>	

This screen allows the parameters to be changed. Once the values are changed, the "Set Parameter" button must be clicked to set the parameters into the controller. A screen will show the number of parameters and the number changed, then revert back to the Home screen.

Controller Type

Controller Type

This screen allows the user to select the controller type.




Please ensure all power is switched off before installing or maintaining this product.

Temperature Units




This screen allows the user to set the probe type for the controller and if it's in degrees Centigrade or Fahrenheit.

Pressure Units

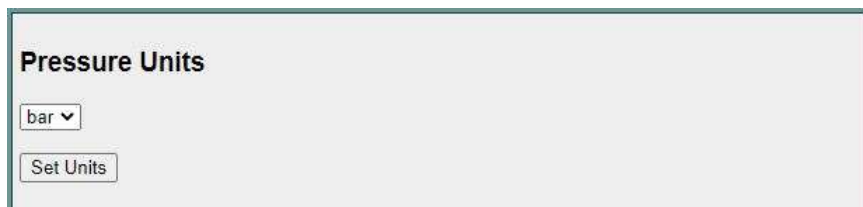

This screen allows the user to set the pressure units displayed to Bar or PSI.

Display Units

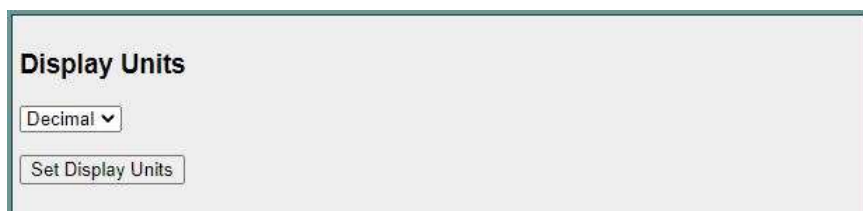

This screen allows the user to set if the display on the controller will display only whole numbers (Whole) or whole numbers and tenths (Decimal).

Remote Defrost



This screen allows the user to send a remote defrost to the controller (note: defrost mode must be set to local).

Name



This screen allows the user to give the controller a name. Type in a name of your choice (upper or lower case alpha-numeric) up to 32 characters. Click "Set Name" to load into the controller. A screen will show the name has been set and then revert back to the home screen. (The Home screen will also now show the controller name).



Please ensure all power is switched off before installing or maintaining this product.

Logging

Logging

Set 1		Set 2	
Log Interval	5s ▾	Log Interval	None ▾
Control temp.	<input type="checkbox"/>	Control temp.	<input type="checkbox"/>
Display temp.	<input type="checkbox"/>	Display temp.	<input type="checkbox"/>
Air on Probe	<input type="checkbox"/>	Air on Probe	<input type="checkbox"/>
Air off Probe	<input checked="" type="checkbox"/>	Air off Probe	<input type="checkbox"/>
Comp A Disch	<input checked="" type="checkbox"/>	Comp A Disch	<input type="checkbox"/>
Comp B Disch	<input type="checkbox"/>	Comp B Disch	<input type="checkbox"/>
Defrost Probe	<input type="checkbox"/>	Defrost Probe	<input type="checkbox"/>
Logging Probe	<input checked="" type="checkbox"/>	Logging Probe	<input type="checkbox"/>
Alarm temp.	<input checked="" type="checkbox"/>	Alarm temp.	<input type="checkbox"/>
Plant Fault 1	<input type="checkbox"/>	Plant Fault 1	<input type="checkbox"/>
Compressor A	<input checked="" type="checkbox"/>	Compressor A	<input type="checkbox"/>
Compressor B	<input type="checkbox"/>	Compressor B	<input type="checkbox"/>
Defrost Control	<input type="checkbox"/>	Defrost Control	<input type="checkbox"/>
Lights	<input type="checkbox"/>	Lights	<input type="checkbox"/>
Case Fans	<input type="checkbox"/>	Case Fans	<input type="checkbox"/>
Last Def. Time	<input type="checkbox"/>	Last Def. Time	<input type="checkbox"/>

This screen allows the user to set the logging features. There are two sets so that values can have different log intervals.

Set the interval required on set1 and set 2, tick the required values to be logged, then click "Set Values" to load into the controller.

A screen will display "Log configuration set" then revert back to the Home page.

Asset Information

Asset Information

Controller		Equipment Manufacturer	
Model		Manufacturer	
Serial No		Model	
Date		Serial No	
		Date	
Installed Fixture		Refurbished Fixture	
Asset		Refurb By	
Installer		Re-Asset	
Date		Installer	
		Date	

This screen allows the user to set asset information into the controller.

Caution: This is a once only operation.

Click "Set Information" and follow the on screen instructions to set up your asset information.



Please ensure all power is switched off before installing or maintaining this product.

Probe Offsets

Probe Offsets

Probe	Low	High	Value	Units
1	-10	10	<input type="text" value="0.0"/>	°C
2	-10	10	<input type="text" value="0.0"/>	°C
3	-10	10	<input type="text" value="0.0"/>	°C
4	-10	10	<input type="text" value="0.0"/>	°C
5	-10	10	<input type="text" value="0.0"/>	°C
6	-10	10	<input type="text" value="0.0"/>	°C

This screen allows the user to set a probe offset between to any of the six probes connected to the controller.

Warranty Information

www.resourcedm.com/terms-and-conditions/

Disclaimer

The specifications of the product detailed in this document may change without notice. RDM Ltd shall not be liable for errors or omissions, for incidental or consequential damages, directly or indirectly, in connection with the furnishing, performance or misuse of this product or document.

Revision History

Revision	Date	Changes
3.0	12/1/2016	First Issue.
3.0a	21/02/2017	New documentation format.
3.0b	10/04/2017	Added to ECA Energy Technology List.
3.0c	17/05/2017	Operating temperature amended.
3.1	29/08/2017	New parameter Cut in Offset. Support added to allow defrost skip functionality with remote defrost.
3.2	30/11/2017	Alarm weight (P-10) and Probe 2 Alarm (P-36) parameters added.
3.2a	15/06/2018	Cut In Offset description amended.
3.3	08/06/2018	Added DHCP update to work with Cisco DHCP server.
3.4	23/10/2018	Further support added to use with Caesium adaptor.
3.4a	31/05/2019	I/O table updated. Updated contact details
3.4b	27/03/2020	Update to specification. Intuitive Mercury added to documentation.
3.4c	21/07/2020	Webpage appearance added.
3.4d	23/12/2020	Warranty information added.
3.5	19/06/2023	Mercury PR0744 added with relays for use with hydrocarbon refrigerants. Bluetooth network support added.



Please ensure all power is switched off before installing or maintaining this product.

Group Offices

RDM Group Head Office

80 Johnstone Avenue
Hillington Industrial Estate
Glasgow
G52 4NZ
United Kingdom

+44 (0)141 810 2828
support@resourcedm.com

RDM USA

9441 Science Center Drive
New Hope
Minneapolis, MN
55428
United States

+1 612 354 3923
usasupport@resourcedm.com

RDM Asia

Sky Park at One City
Jalan USJ 25/1
47650 Subang Jaya
Selangor
Malaysia

+603 5022 3188
asiatech@resourcedm.com



Visit www.resourcedm.com/support for more information on RDM solutions, additional product documentation and software downloads.

While every effort is made to ensure the information given within this document is accurate, Resource Data Management Ltd shall not be liable for errors or omissions, for incidental or consequential damages, directly or indirectly, in connection with the furnishing, performance or misuse of this product or document. All specifications are subject to change without notice.

See www.resourcedm.com for terms and conditions of sales.

Copyright © Resource Data Management