



Mercury

PR0710-STA



Intuitive

PR0750-STA

Mercury 2 & Intuitive Mercury Control Thermostat Installation & User Guide

Resource Data Management Ltd

80 Johnstone Avenue, Hillington Industrial Estate,
Glasgow, Scotland G52 4NZ UK

+44(0)141 810 2828

support@resourcedm.com

sales@resourcedm.com

Switchboard

Technical Support

Sales Enquiries



Table of Contents:

THE MERCURY & INTUITIVE RANGE 3

 Description: 3

 Variants 3

Configuration 3

Compatible Network Interfaces 3

Front Display Features 4

Connections 4

Mercury Mk2 4

Intuitive Mercury Controller Intuitive Mercury Network Expansion Options 5

 Input / Output allocation table 5

Setting up the controller 6

 Setup through front buttons 6

 Setup Function Menu (Common to all types)..... 6

Recommended set-up method 6

 rtc. Real time clock (This will automatically synchronise on network systems) 6

 type. Set/view controller type. The controller type is preset at the factory and cannot be changed..... 6

 Unit. Set/view temperature unit and Probe type 7

 Display..... 7

 PARA. Set/view parameters (This can be achieved at the network front end) 7

Parameter Table for Control Thermostat 7

Parameter Descriptions 9

Network Configuration 10

 RS485 Legacy module / Intuitive Internal RS485 Network card..... 11

 Fast Network Address Reset 11

 IP Futura module / Intuitive Internal IP Network card 11

Mercury Switch 12

Viewing 12

 Input / Output Table 12

Display Messages 13

Network Alarms 13

Normal Operation 13

 Faults..... 13

 Network 13

 Probe Offset 13

 Set Point..... 13

 Valve Symbol 13

 Operation 14

 Relay Actions 15

 Alarm Relay Action..... 15

GP Timer Set-up..... 15

Remote Commands 15

 Power requirements 16

 General..... 16

 Relay Specification..... 16

Specification 16

 Inputs..... 17

Installation 17

Dimensions 17

 Fixing..... 17

Dimensions 18

 Intuitive Mercury Mounting Instructions 18

 Cleaning 18

Disclaimer..... 18

REVISION HISTORY..... 19



Ensure that all power is switched off before installing or maintaining this product

The Mercury & Intuitive Range From Resource Data Management

Description:

The Mercury Control Stat is a multi-purpose thermostat controller that can be used in heating/cooling applications. Control can be achieved from either input 1 or 2 or by a percentage weighting of the two inputs. The remaining inputs can be configured as override, fault or run input's. The Stat allows for two heating and two cooling differential's to be set with an optional time or temperature delay on the second stage of heating/cooling. Included in the controller is a frost detect parameter. This over-rides the timer function, when the timer is off, to begin heating should the temperature reach the frost detect value. There is a 7-day timer with two on/off times per day. Over/Under temperature alarms can be configured with an optional delay. The ability to enable any relay as an alarm relay is included as well as the option to map a relay to the status of the controller timer. The user can predefine the number fans operating at any one time or if more than one fan is configured their operation can be controlled by fuzzy logic

The Intuitive Mercury range is designed to be used in a control panel or electrical tray. This range has the same features as the Mercury Mk2 controller with additional benefits such as higher rated relays each protected by an integral fuse and fuse protection for the incoming power supply, all connections are plug in socket. There are multiple network interfaces to choose from including Ethernet.

The controller supports PT1000, NTC2K, 470R, 700R, 3K, 5K, 6K, NTC2K25, NTC10K or NTC10K(2) USA temperature probes (note: probe types cannot be mixed)

Variants

Description	Part Number
Mercury Mk2 Control Thermostat.	PR0710-STA
Intuitive Mercury Control Thermostat.	PR0750-STA

Configuration

There is only one type of configuration in the Mercury Control Thermostat.

Compatible Network Interfaces

Mercury and Intuitive Mercury controllers are capable of connecting to either a TCP/IP local area network, an RS485 Genus compatible network or they can be used in standalone mode with no network output. To connect to a network you must add the correct communications module. Connecting to any of these communication modules will automatically be detected on power up and will affect the set up screens available to you.

Description	Part Number
IP Futura (Single Mercury to IP Interface)	PR0016
RS485 Interface (Single Mercury to RS485 Interface)	PR0026
Mercury IP Switch (IP support for 10 controllers)	PR0018
Mercury IP Switch with Pressure/Humidity Inputs	PR0018-PHI

The Intuitive Mercury Controller is supplied as standard with an internal RS232 network card, this allows connection to any of the above external network interfaces. Two alternative internal network cards are also available, these can be supplied factory fitted as an option or purchased separately as an interface kit.

Description	Part Number
Intuitive Internal IP Network Card Interface Kit	PR0770
Intuitive Internal RS485 Network Card Interface Kit	PR0771



Ensure that all power is switched off before installing or maintaining this product


Front Display Features

LED's: -

- Valve** (Indicates Controller Operational State)
- Fans** (Selectable Relay)
- Lights** (Not Used)
- Defrost** (Not Used)
- On-Line**
- Off No network attached
- Flashing Attempting to Log on to network
- Steady On-line
- Service** (Indicates additional Parameter setting mode)
- Alarm** (Selectable Relay)
- HACCP**



Keys

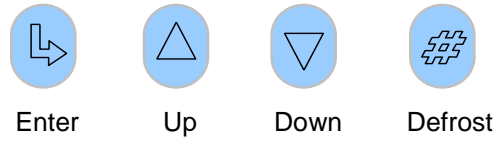

Note: Function keys illuminate when pressed, illumination is turned off 20 seconds after the key is used. Press and hold the defrost button to force a manual defrost

Main Display




4 character LED display, used to display temperature and status messages.

Note the Intuitive Mercury display is green in color when lit.

Connections

Mercury Mk2

Input and Output connections are made to the back of the controller, the RS232 communication port is on the side. The diagram shows the connection detail. Inputs and outputs are assigned according to the chosen configuration. See [Input/Output](#) tables for further details on connections.

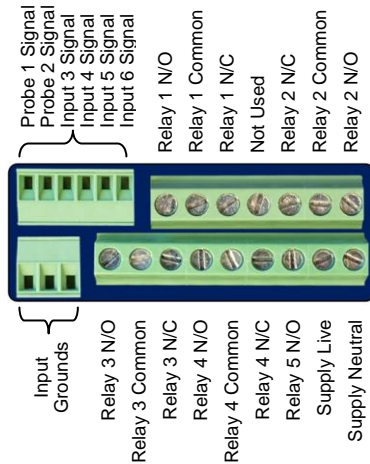


Do not connect an earth



Ensure that all power is switched off before installing or maintaining this product

Intuitive Mercury Controller

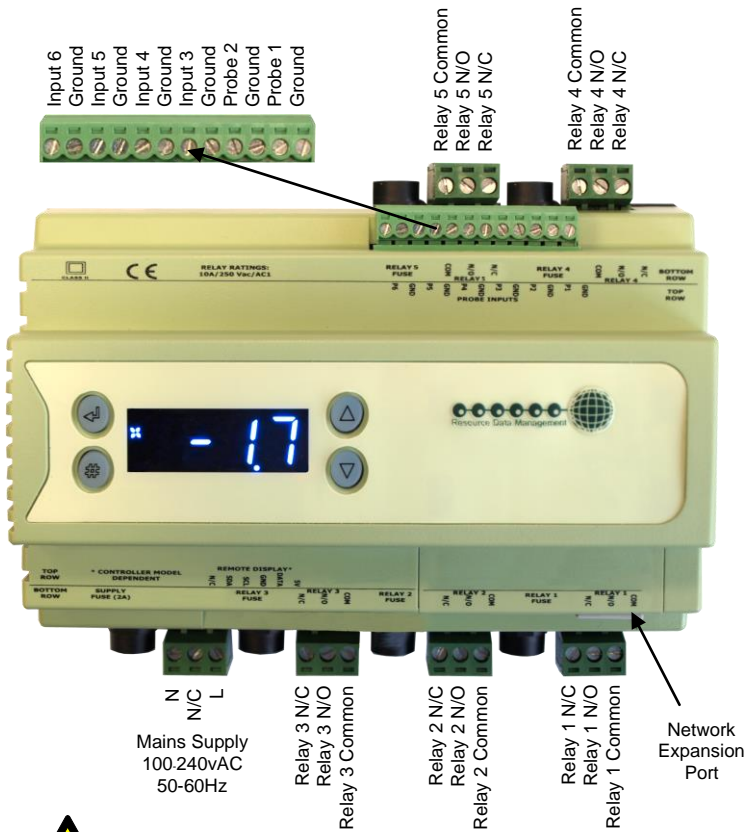

Do not connect an earth

All inputs and outputs are plug and socket. The supply voltage and relay outputs have individual fuse protection.

Intuitive Mercury Network Expansion Options

RS232 Network Card (Default)



The Intuitive Mercury is supplied with an RS232 Network Card fitted as standard. Some example optional network cards are shown below

IP Network Card (PR0770)



Rotary Address Switches, Network Collision LED, Network Activity LED

RS485 Network Card (PR0771)



Ground, B-, A+, Screen, Network Activity LED

Input / Output allocation table

TYPE	Description	Alarm Action	Comments
Probe 1	Probe 1	Yes	
Probe 2	Probe 2	Yes	
Input 3*	Probe / Run / Fault or Override*	Yes	0V return activates
Input 4*	Probe / Run / Fault or Override*	Yes	0V return activates
Input 5*	Probe / Run / Fault or Override*	Yes	0V return activates
Input 6*	Probe / Run / Fault or Override*	Yes	0V return activates
Relay 1	Configurable	N/A	See "Relay Contacts" Below
Relay 2	Configurable	N/A	See "Relay Contacts" Below
Relay 3	Configurable	N/A	See "Relay Contacts" Below
Relay 4	Configurable	N/A	See "Relay Contacts" Below
Relay 5	Configurable	N/A	See "Relay Contacts" Below

* Inputs 3 to 6 are configurable as either, a Probe, Run NO/NC, Fault NO/NC or Override NO/NC inputs.

The alarm relay is energised for no alarm. Use the NC and Common for "Loop make" on alarm or use the NO and Common for "Loop break" on alarm

Relay Contacts

- Heating : Use N/O Contact
- Cooling : Use N/C Contact
- Fan : Use N/C Contact
- Timer : Use N/C Contact



Ensure that all power is switched off before installing or maintaining this product

Setting up the controller

Access to the controller can be achieved several ways

- Through the front mounted buttons
- Direct access by PC or palm top into the rear comms port. This requires a software package available on the RDM website
- Through legacy front end panels on 485 networks
- Through the RDM Data Manager.
- Across an IP network. (Current controller IP address required)

Setup through front buttons



To enter setup mode, hold the Enter and Down buttons together for approximately 3 seconds until the message "Ent" appears on the display. Now press the Enter button again to enter the function menu. IO will be displayed. Scroll up or down to go through the list.

Setup Function Menu (Common to all types)

Display	Option	Explained in Paragraph	Display	Option	Explained in Paragraph
IO	View Inputs / Outputs and States	Input / output table	rtc	Set/view Clock (rtc = Real Time Clock)	Real Time Clock
PArA	Set/View Parameters	Set view parameters	nEt	Set/view network configuration	Network Configuration
Unit	Probe type and Celsius/Fahrenheit option	Set View Unit	SoFt	View software version	
diSP	Display whole units or decimal	Display	OFSt	Probe Offset	Probe Offset
tyPE	Set/View Controller Type	Set/view controller type	ESC	Exit Setup mode	

Recommended set-up method

If you are not connecting to a network and want to set up the controller through the buttons we recommend you use the following order from the function menu.

rtc. Real time clock (This will automatically synchronise on network systems)

- Use the up or down buttons to scroll through the display until the display reads "rtc"
- Press enter. The display will show "t-1". press enter again
- Scroll hours up or down (0 – 23) press enter
- Use up button to select "t-2", press enter
- Scroll minutes up or down (0 – 59) press enter
- Repeat for t-3 (seconds 0 – 59)
- Repeat for t -4 (Days up to 31)
- Repeat for t -5 (months up to 12)
- Repeat for t -6 (Year up to 99)
- Use up button to display "ESC", press enter to display "rtc"

Timeclock is now set

type. Set/view controller type. The controller type is preset at the factory and cannot be changed.

- From the function menu scroll to select type, press enter
- View type 1
- Press enter to return to the software menu.



Ensure that all power is switched off before installing or maintaining this product

Unit. Set/view temperature unit and Probe type

From the function menu scroll to select Unit
Press enter and the value will be displayed: -

- | | |
|-------------------------|--|
| 0 for PT1000 Celsius | 10 for NTC2K25 Celsius |
| 1 for PT1000 Fahrenheit | 11 for NTC2K25 Fahrenheit |
| 2 for NTC2K Celsius | 12 for 5K Celsius |
| 3 for NTC2K Fahrenheit | 13 for 5K Fahrenheit |
| 4 for 470R Celsius | 14 for 6K Celsius |
| 5 for 470R Fahrenheit | 15 for 6K Fahrenheit |
| 6 for 700R Celsius | 16 for NTC10K Celsius |
| 7 for 700R Fahrenheit | 17 for NTC10K Fahrenheit |
| 8 for 3K Celsius | 18 for NTC10K(2) Celsius (USA NTC10K) |
| 9 for 3K Fahrenheit | 19 for NTC10K(2) Fahrenheit (USA NTC10K) |

Use the up or down keys to select the units and press enter. This function is now complete

Display

From the function menu scroll to and select diSP.

Press enter and one of the following values will be shown: -
0 controller display will show the whole number and tenths value of a temperature reading.
1 controller display will show temperatures as a whole number.

Display defaults to 0.

PArA. Set/view parameters (This can be achieved at the network front end)

- From the function menu scroll to select PArA
- Pressing Enter while PArA is displayed will enter the parameter menu. The first parameter option will be displayed as P-01. Pressing the Up or Down button will present the other parameter options P-02, P-03 etc. See the parameter list below to find what parameter number corresponds to which actual parameter. Pressing the Enter button will show the current value of the selected parameter. Press Up or Down to modify the value and press Enter again to save the value. The parameter list number will be displayed again. Two other options are present in the parameter menu – dFLt and ESC. Selecting ESC will exit setup mode. Selecting dFLt will reset all parameters back to the default values for the current type controller.

Parameter Table for Control Thermostat

Number	Parameter	Range °C (°F)	Step	Units	Default
P-01	Set-point	-49 to 30°C (-56.2 to 86)	0.1	Deg	18.0
P-02	Upper Set-point limit	-49 to 30°C (-56.2 to 86)	0.1	Deg	23.0
P-03	Lower Set-point limit	-49 to 30°C (-56.2 to 86)	0.1	Deg	15.0
P-04	Heating 1 Diff (Below set-point)	0 to 20°C (0 to 36)	0.1	Deg	3.0
P-05	Heating 2 Diff (Below set-point)	0 to 20°C (0 to 36)	0.1	Deg	10.0
P-06	Cooling 1 Diff (Above set-point)	0 to 20°C (0 to 36)	0.1	Deg	3.0
P-07	Cooling 2 Diff (Above set-point)	0 to 20°C (0 to 36)	0.1	Deg	10.0
P-08	Control Weight	0 to 100	1	%	50
P-09	Display Weight	0 to 100	1	%	50
P-20	Frost Detect Enable	0 = off, 1 = on	1		0
P-21	Frost Probe	0 = Probe 1, 1 = Probe 2, 2 = Probe 3, 3 = Probe 4, 4 = Probe 5 5 = Probe 6, 6 = Control	1		6
P-22	Frost Detect Set-point	-49 to 30°C (-56.2 to 86)	0.1	Deg	0.0
P-23	Frost Diff (Above Frost set-point)	0 to 20°C (0 to 36)	0.1	Deg	6
P-30	Fans Mode	0 = On, 1 = Follows Timer	1		0
P-31	Fans Run	0 = Off, 1 = Low, 2 = Medium, 3 = High, 4 = Auto	1		4
P-32	Fans Run-on	00:00 to 99:00	01:00	mm:ss	20:00
P-40	Heating Stage Delay	00:00 to 99:00, 00:00 = Not Used	01:00	mm:ss	05:00
P-41	Cooling Stage Delay	00:00 to 99:00, 00:00 = Not Used	01:00	mm:ss	05:00
P-42	Over-ride alarm delay	00:00 to 99:00	01:00	mm:ss	05:00
P-43	OT/UT Alarm Delay	00:00 to 99:00	01:00	mm:ss	20:00
P-44	Under temperature Alarm	-98 to 128°C (-144.4 to 262.4)	0.1	Deg	0.0



Ensure that all power is switched off before installing or maintaining this product

Number	Parameter	Range °C (°F)	Step	Units	Default
P-45	Over Temperature Alarm	-98 to 128°C (-144.4 to 262.4)	0.1	Deg	25.0
P-50	Input 3	0 = Unused, 1 = Probe, 2 = Run NO, 3 = Run NC, 4 = Fault NO 5 = Fault NC, 6 = Over-ride NO, 7 = Over-ride NC	1		0
P-51	Input 4	0 = Unused, 1 = Probe, 2 = Run NO, 3 = Run NC, 4 = Fault NO 5 = Fault NC, 6 = Over-ride NO, 7 = Over-ride NC	1		0
P-52	Input 5	0 = Unused, 1 = Probe, 2 = Run NO, 3 = Run NC, 4 = Fault NO 5 = Fault NC, 6 = Over-ride NO, 7 = Over-ride NC	1		0
P-53	Input 6	0 = Unused, 1 = Probe, 2 = Run NO, 3 = Run NC, 4 = Fault NO 5 = Fault NC, 6 = Over-ride NO, 7 = Over-ride NC	1		0
P-54	Relay 1 Mode*	0 = Off, 1 = Heating stage 1, 2 = Heating stage 2, 3 = Cooling stage 1, 4 = Cooling stage 2, 5 = Fan, 6 = Timer 7 = Alarm	1		0
P-55	Relay 2 Mode*	0 = Off, 1 = Heating stage 1, 2 = Heating stage 2, 3 = Cooling stage 1, 4 = Cooling stage 2, 5 = Fan, 6 = Timer 7 = Alarm	1		0
P-56	Relay 3 Mode*	0 = Off, 1 = Heating stage 1, 2 = Heating stage 2, 3 = Cooling stage 1, 4 = Cooling stage 2, 5 = Fan, 6 = Timer 7 = Alarm	1		0
P-57	Relay 4 Mode*	0 = Off, 1 = Heating stage 1, 2 = Heating stage 2, 3 = Cooling stage 1, 4 = Cooling stage 2, 5 = Fan, 6 = Timer 7 = Alarm	1		0
P-58	Relay 5 Mode*	0 = Off, 1 = Heating stage 1, 2 = Heating stage 2, 3 = Cooling stage 1, 4 = Cooling stage 2, 5 = Fan, 6 = Timer 7 = Alarm	1		0
P-70	Timer Mode	0 = Local, 1 = Remote, 2 = Man Off, 3 = Man On	1		0
P-71	Sunday On Time 1	00:00 to 23:59	00:01	hh:mm	08:00
P-72	Sunday Off Time 1	00:00 to 23:59	00:01	hh:mm	20:00
P-73	Sunday On Time 2	00:00 to 23:59	00:01	hh:mm	08:00
P-74	Sunday Off Time 2	00:00 to 23:59	00:01	hh:mm	20:00
P-75	Monday On Time 1	00:00 to 23:59	00:01	hh:mm	08:00
P-76	Monday Off Time 1	00:00 to 23:59	00:01	hh:mm	20:00
P-77	Monday On Time 2	00:00 to 23:59	00:01	hh:mm	08:00
P-78	Monday Off Time 2	00:00 to 23:59	00:01	hh:mm	20:00
P-79	Tuesday On Time 1	00:00 to 23:59	00:01	hh:mm	08:00
P-80	Tuesday Off Time 1	00:00 to 23:59	00:01	hh:mm	20:00
P-81	Tuesday On Time 2	00:00 to 23:59	00:01	hh:mm	08:00
P-82	Tuesday Off Time 2	00:00 to 23:59	00:01	hh:mm	20:00
P-83	Wednesday On Time 1	00:00 to 23:59	00:01	hh:mm	08:00
P-84	Wednesday Off Time 1	00:00 to 23:59	00:01	hh:mm	20:00
P-85	Wednesday On Time 2	00:00 to 23:59	00:01	hh:mm	08:00
P-86	Wednesday Off Time 2	00:00 to 23:59	00:01	hh:mm	20:00
P-87	Thursday On Time 1	00:00 to 23:59	00:01	hh:mm	08:00
P-88	Thursday Off Time 1	00:00 to 23:59	00:01	hh:mm	20:00
P-89	Thursday On Time 2	00:00 to 23:59	00:01	hh:mm	08:00
P-90	Thursday Off Time 2	00:00 to 23:59	00:01	hh:mm	20:00
P-91	Friday On Time 1	00:00 to 23:59	00:01	hh:mm	08:00
P-92	Friday Off Time 1	00:00 to 23:59	00:01	hh:mm	20:00
P-93	Friday On Time 2	00:00 to 23:59	00:01	hh:mm	08:00
P-94	Friday Off Time 2	00:00 to 23:59	00:01	hh:mm	20:00
P-95	Saturday On Time 1	00:00 to 23:59	00:01	hh:mm	08:00
P-96	Saturday Off Time 1	00:00 to 23:59	00:01	hh:mm	20:00
P-97	Saturday On Time 2	00:00 to 23:59	00:01	hh:mm	08:00
P-98	Saturday Off Time 2	00:00 to 23:59	00:01	hh:mm	20:00
dFLt	Factory Defaults				

* At least one relay output must be selected as a fan before the thermostat control will operate. This is a precautionary measure to prevent the user from enabling a heater without the appropriate fan(s) being selected as in some applications this could damage the heating equipment or cause a fire hazard.



Ensure that all power is switched off before installing or maintaining this product

Parameter Descriptions

Number	Parameter	Description
P-01	Set-point	Thermostat target temperature. Point at which heating 1 or cooling 1 will switch off.
P-02	Upper Set-point limit	Maximum upper temperature limit the user can adjust the set point too via the quick key feature on the controller display. (Using the up and down button)
P-03	Lower Set-point limit	Maximum lower temperature limit the user can adjust the set point range via the quick key feature on the controller display. (Using the up and down button)
P-04	Heating 1 Diff (Below set-point)	Differential temperature below the set-point temperature. The first heating stage switches on when this temperature is reached.
P-05	Heating 2 Diff (Below set-point)	Differential temperature below the set-point temperature. The second heating stage switches on when this temperature is reached.
P-06	Cooling 1 Diff (Above set-point)	Differential temperature above the set-point temperature. The first cooling stage switches on when this temperature is reached.
P-07	Cooling 2 Diff (Above set-point)	Differential temperature below the set-point temperature. The second cooling stage switches on when this temperature is reached.
P-08	Control Weight	Percentage of Probe 1 temperature that is used to calculate the control temp. The remaining percentage will be used on Probe 2 temperature Example, P-08 set to 30% Control temp = 30% Probe 1 + 70% Probe 2
P-09	Display Weight	As above only applied to the display temperature
P-20	Frost Detect Enable	Enables the frost detect feature.
P-21	Frost Probe	Allows user to define the source of the temperature used with frost detect.
P-22	Frost Detect Set-point	Set-point at which the heating element will switch on when the temperature drops below the frost detect set point, providing the feature has been enabled.
P-23	Frost Diff (Above Frost set-point)	Differential temperature above the set-point temperature. The heating element switches off when above this temperature
P-30	Fans Mode	<ul style="list-style-type: none"> ➤ Always on where the fans are never turned off. ➤ Follows timer on/off status. When the fans are in the off period the thermostat operation is disabled. Note the parameter "Fans Run-on" will have an effect on the fans status.
P-31	Fans Run	<p>Determines fan operation:</p> <ul style="list-style-type: none"> ➤ Off ➤ Low ➤ Medium ➤ High ➤ Auto <p>If three relays are selected as fans then when set to low 1 fan would be on, medium equals 2 fans on and high would turn on all three fans. If set to auto, the software fuzzy logic will allocate the best speed for the control temperature. If set to "Off" then this will stop the fans and thermostat operation.</p>
P-32	Fans Run-on	The period of time for which the fans remain on after the timer/thermostat has been turned off.
P-40	Heating Stage Delay	Time delay before heating stage 2 is turned on once below the set point. Please note the heating stage is turned on when either the delay time expires or the temperature drops below heating 2 diff set point whichever occurs first.
P-41	Cooling Stage Delay	Time delay before cooling stage 2 is turned on once above the set point. Please note the cooling stage is turned on when either the delay time expires or the temperature rises above cooling 2 diff set point whichever occurs first.
P-42	Over-ride alarm delay	When an over-ride is initiated an alarm is generated. A delay can be added before signalling the alarm. This delay does not apply when the input is set as fault input.
P-43	OT/UT Alarm Delay	Delay applied before an alarm is signalled for an over/under temperature alarm.
P-44	Under temperature Alarm	Under temperature alarm set point. This alarm uses the control temperature.
P-45	Over Temperature Alarm	Over temperature alarm set point. This alarm uses the control temperature
P-50	Input 3	<ul style="list-style-type: none"> ➤ Unused – Input has no function. ➤ Probe - Used for monitoring purposes or as frost probe. This configuration has no alarm function. ➤ Run NO (Normally Open) – Thermostat requires run signal before it will operate. ➤ Run NC (Normally Closed) - Thermostat requires run signal before it will operate. ➤ Fault NO (Normally Open) – Generate an alarm to indicate a fault. ➤ Fault NC (Normally Closed) - Generate an alarm to indicate a fault. ➤ Over-ride NO ➤ Over-ride NC
P-51	Input 4	As above.
P-52	Input 5	As above.
P-53	Input 6	As above.



Ensure that all power is switched off before installing or maintaining this product

Number	Parameter	Description
P-54	Relay 1 Mode	<ul style="list-style-type: none"> ➤ Off – Relay has no operation ➤ Heating stage 1 – Operates in relation to heating diff 1 and the controller set-point. ➤ Heating stage 2 - Operates in relation to heating diff 2 and the controller set-point. ➤ Cooling stage 1 - Operates in relation to cooling diff 1 and the controller set-point. ➤ Cooling stage 2 - Operates in relation to cooling diff 2 and the controller set-point. ➤ Fan – Operation dependant on parameter "Fans Mode", "Run on" and "Fans Run". ➤ Timer – Relay operation follows the timer on/off status. ➤ Alarm – When enabled the alarm relay is energised for no alarm. When an alarm condition occurs the relay will de-energise. Please see Alarm Relay Action table for conditions.
P-55	Relay 2 Mode	As above.
P-56	Relay 3 Mode	As above.
P-57	Relay 4 Mode	As above.
P-58	Relay 5 Mode	As above.
P-70	Timer Mode	<ul style="list-style-type: none"> ➤ Use a local schedule following the controller RTC (P-71 to P-98) ➤ Use a remote schedule (Set up in the system front end) ➤ Always Off ➤ Always On
P-71	Sunday On Time 1	When P-70 is set to Local, Sunday on time 1
P-72	Sunday Off Time 1	When P-70 is set to Local, Sunday off time 1
P-73	Sunday On Time 2	When P-70 is set to Local, Sunday on time 2
P-74	Sunday Off Time 2	When P-70 is set to Local, Sunday off time 2
P-75	Monday On Time 1	When P-70 is set to Local, Monday on time 1
P-76	Monday Off Time 1	When P-70 is set to Local, Monday off time 1
P-77	Monday On Time 2	When P-70 is set to Local, Monday on time 2
P-78	Monday Off Time 2	When P-70 is set to Local, Monday off time 2
P-79	Tuesday On Time 1	When P-70 is set to Local, Tuesday on time 1
P-80	Tuesday Off Time 1	When P-70 is set to Local, Tuesday off time 1
P-81	Tuesday On Time 2	When P-70 is set to Local, Tuesday on time 2
P-82	Tuesday Off Time 2	When P-70 is set to Local, Tuesday off time 2
P-83	Wednesday On Time 1	When P-70 is set to Local, Wednesday on time 1
P-84	Wednesday Off Time 1	When P-70 is set to Local, Wednesday off time 1
P-85	Wednesday On Time 2	When P-70 is set to Local, Wednesday on time 2
P-86	Wednesday Off Time 2	When P-70 is set to Local, Wednesday off time 2
P-87	Thursday On Time 1	When P-70 is set to Local, Thursday on time 1
P-88	Thursday Off Time 1	When P-70 is set to Local, Thursday off time 1
P-89	Thursday On Time 2	When P-70 is set to Local, Thursday on time 2
P-90	Thursday Off Time 2	When P-70 is set to Local, Thursday off time 2
P-91	Friday On Time 1	When P-70 is set to Local, Friday on time 1
P-92	Friday Off Time 1	When P-70 is set to Local, Friday off time 1
P-93	Friday On Time 2	When P-70 is set to Local, Friday on time 2
P-94	Friday Off Time 2	When P-70 is set to Local, Friday off time 2
P-95	Saturday On Time 1	When P-70 is set to Local, Saturday on time 1
P-96	Saturday Off Time 1	When P-70 is set to Local, Saturday off time 1
P-97	Saturday On Time 2	When P-70 is set to Local, Saturday on time 2
P-98	Saturday Off Time 2	When P-70 is set to Local, Saturday off time 2
dFLt	Factory Defaults	Restores all of the parameters to their default values

Network Configuration

The final section to setup is the network address. In all instances, this must be done before the controller is plugged into the site network. The controllers have an auto-initialise function, which will automatically log the device onto the site network. If the wrong address has been entered onto the network, you will have to reset the controller address by setting the address to 00-0, and then re-enter the correct address. (You may have to deregister the wrong address from the home system as well).

When logging a Mercury or Intuitive Mercury with an RS232 interface onto a network you must first connect the controller to a communications module, this is either a 485 Legacy, IP Futura or Mercury Switch. When using an Intuitive Mercury controller, the controller has to have the correct network card fitted (see "compatible network interfaces"). For connection to a Mercury Switch (Hub) or an external network interface, the standard fitment RS232 network card is utilized.



Ensure that all power is switched off before installing or maintaining this product

RS485 Legacy module / Intuitive Internal RS485 Network card

Connecting an RS485 legacy Module or an Intuitive Internal RS485 network card to the controller will govern which set up screens are made available. Both modules support the “Genus” protocol only.

Display	Option
485t	485 Network Type
485A	485 Address/Name
gAdd	Show underlying network address assigned to controller
rLog	Re-log the controller back onto the network
CLrA	Clear the address/name from the controller
ESC	Exit network menu. N.B. this option must be selected to save any changes made in this menu

The 485t option shows a value representing the network type. There is only one type in this case.

Value	Network Type
1	Genus compatible

The 485A option shows a value representing the name of the controller in a Genus compatible network.

Fast Network Address Reset

The CLrA option will clear out the network address and name in the controller. The ‘CLrA’ message will flash for confirmation. Press the Enter button to execute the command, Up or Down buttons to cancel.

To enter this mode, hold the Enter, Up and Down buttons together for approximately 3 seconds until the message CLrA appears on the display. CLrA is the first option in the menu consisting of the following options:

Display	Option
CLrA	Clear the address/name from the controller
ESC	Exit Setup mode

Pressing the Enter button to select the CLrA option will cause the ‘CLrA’ message to flash for confirmation, if the network type is set to Genus compatible. Press the Enter button to execute the command, Up or Down buttons to cancel. If the network type is not set to Genus compatible then the CLrA message will not flash and the ESC option can be used to exit the menu.

IP Futura module / Intuitive Internal IP Network card

In an IP system there are two options,

- IP-L
- IP-r

IP-L allows you to fix an IP address into the controller, which you would use when you are connecting the controllers onto a customer’s local area network. This would allow the customer to view each controller using Internet Explorer

IP-r allows you to give each controller on the system a unique number. This number is then allocated a dynamic IP address by the system DHCP server (such as the RDM Data Manager or Data Director)

IP-L

To configure the communication module or network card for IP-L, set all three rotary switches to zero. The module should then be connected to the controller. In the case of an Intuitive Mercury controller where the network card is already fitted, the controller should be powered off, all three rotary switches set to zero and the controller powered on.

1. nEt. From the function menu you can now select nEt
 - Press enter and the display will show “IP-L”, press enter
 - You can now set the address using the table below

Display	Option
IP-1	IP Address byte 1
IP-2	IP Address byte 2
IP-3	IP Address byte 3
IP-4	IP Address byte 4
nL	Network Mask Length
gt-1	Gateway Address byte 1
gt-2	Gateway Address byte 2
gt-3	Gateway Address byte 3
gt-4	Gateway Address byte 4
ESC	Exit network menu. N.B. this option must be selected to save any changes made in this menu



Ensure that all power is switched off before installing or maintaining this product

IP-r

To configure the communication module for IP-r, set the three rotary switches to give each controller a unique identifier. The module should then be connected to the controller and the network. In the case of an Intuitive Mercury controller where the network card is already fitted, the three rotary switches must be set when the controller is powered off, the controller should then be powered on to connect to the network.

2. nEt. From the function menu you can now select nEt
 - Press enter and the display will show "IP-r", press enter
 - You can now view only the address given by the DHCP server

To ease setup, a single network mask length value is used. If the address has been specified with a network mask value in dotted IP format e.g. 255.255.255.0 then the table below gives the conversion:

Mask	Length	Mask	Length	Mask	Length
		255.255.254.0	23	255.254.0.0	15
255.255.255.252	30	255.255.252.0	22	255.252.0.0	14
255.255.255.248	29	255.255.248.0	21	255.248.0.0	13
255.255.255.240	28	255.255.240.0	20	255.240.0.0	12
255.255.255.224	27	255.255.224.0	19	255.224.0.0	11
255.255.255.192	26	255.255.192.0	18	255.192.0.0	10
255.255.255.128	25	255.255.128.0	17	255.128.0.0	09
255.255.255.0	24	255.255.0.0	16	255.0.0.0	08

Mercury Switch

Please refer to the Mercury Switch user guide, which can be obtained from the RDM website, for information regarding connecting a controller to a network.

Viewing

Apart from setting up the controller, you can also view the status of the inputs and outputs and controller states. From the function menu, select "I/O", press enter. You can now scroll through the IO table as set out below

Input / Output Table

Number	IO	Range*	Step	Units
I-01	Control temp	-98 to 128 °C	0.1	Deg
I-02	Display temp	-98 to 128 °C	0.1	Deg
I-10	Probe 1	-98 to 128 °C	0.1	Deg
I-11	Probe 2	-98 to 128 °C	0.1	Deg
I-12	Probe 3	-98 to 128 °C	0.1	Deg
I-13	Probe 4	-98 to 128 °C	0.1	Deg
I-14	Probe 5	-98 to 128 °C	0.1	Deg
I-15	Probe 6	-98 to 128 °C	0.1	Deg
I-20	Run Signal	0 (Off), 1 (On), 2 (Unused)		
I-21	Fault Signal	0 (Alarm), 1 (Ok), 2 (Unused)		
I-22	Over-ride	0 (Off), 1 (On), 2 (Unused)		
O-01	Relay 1	0 (Off), 1 (On)		
O-02	Relay 2	0 (Off), 1 (On)		
O-03	Relay 3	0 (Off), 1 (On)		
O-04	Relay 4	0 (Off), 1 (On)		
O-05	Relay 5	0 (Off), 1 (On)		
O-06	Timer	0 (Off), 1 (On)		
O-07	Set Point	-49 to 30 °C	0.1	Deg
O-08	Frost Probe	-49 to 30 °C	0.1	Deg
S-01	Control State	0 (Stabilise), 1 (Normal), 2 (OT Alarm), 3 (UT Alarm), 5 (PrbFail)		



Ensure that all power is switched off before installing or maintaining this product

Display Messages

The following alarms and messages can appear on the Mercury or Intuitive display.

Display Message	System status
Ot	Over Temperature Alarm
Ut	Under Temperature Alarm
AL	Control State in Alarm
Ft	Control Fault
Prb	Probe Fault

Network Alarms


The table below shows the text and associated type number that is sent to the system "front end". The type number is normally used to provide different alarm actions.

Alarm text	Type # (index)
Over-ride Alarm	16
Over Temperature	4
Under Temperature	5

Alarm text	Type # (index)
Control Probe	6
Fault Signal	6
Run Signal	3

Normal Operation

During normal operation, the controller will show the display temperature, if there are no alarms. If there is a current alarm then an alarm message will be shown on the display. If the fans are operating the fans symbol will be lit. If the Control Stat is on a network and on-line, the green network LED will be on.

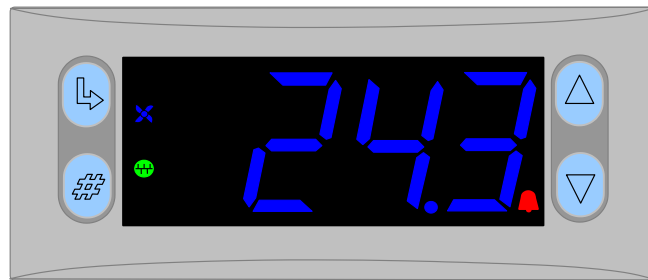

Faults

If a fault is detected, the Control Stat will indicate the fault on the display and the red alarm LED will come on

Network

The Network green LED flashes if the controller goes off-line or loses its given address

Probe Offset

This feature allows each probe value to be modified by an "offset". Offset values are from -10°C (-18°F) to +10°C (+18°F) and on a channel basis. Example C1 = Probe 1.

Set Point

Shows the current operating set point of the thermostat. If for example the set point has been adjusted via the controller display (up & down button press). Set point can be viewed from a front-end via the values page or Communicator software or from the controller IO.


Valve Symbol

The valve symbol on the controller display indicates the current operational status of the controller. If "Fans Mode" is set to "Timed", and the symbol is present, then it implies that the timer is in the off period and therefore there will be no fan/thermostat operation. When the valve symbol is off then the timer is in the on period and the fan/thermostat will follow its normal control strategy. If "Fans Mode" is set to "On" then the valve symbol will be permanently off and the fans/thermostat control strategy will operate continuously.



Ensure that all power is switched off before installing or maintaining this product

Operation

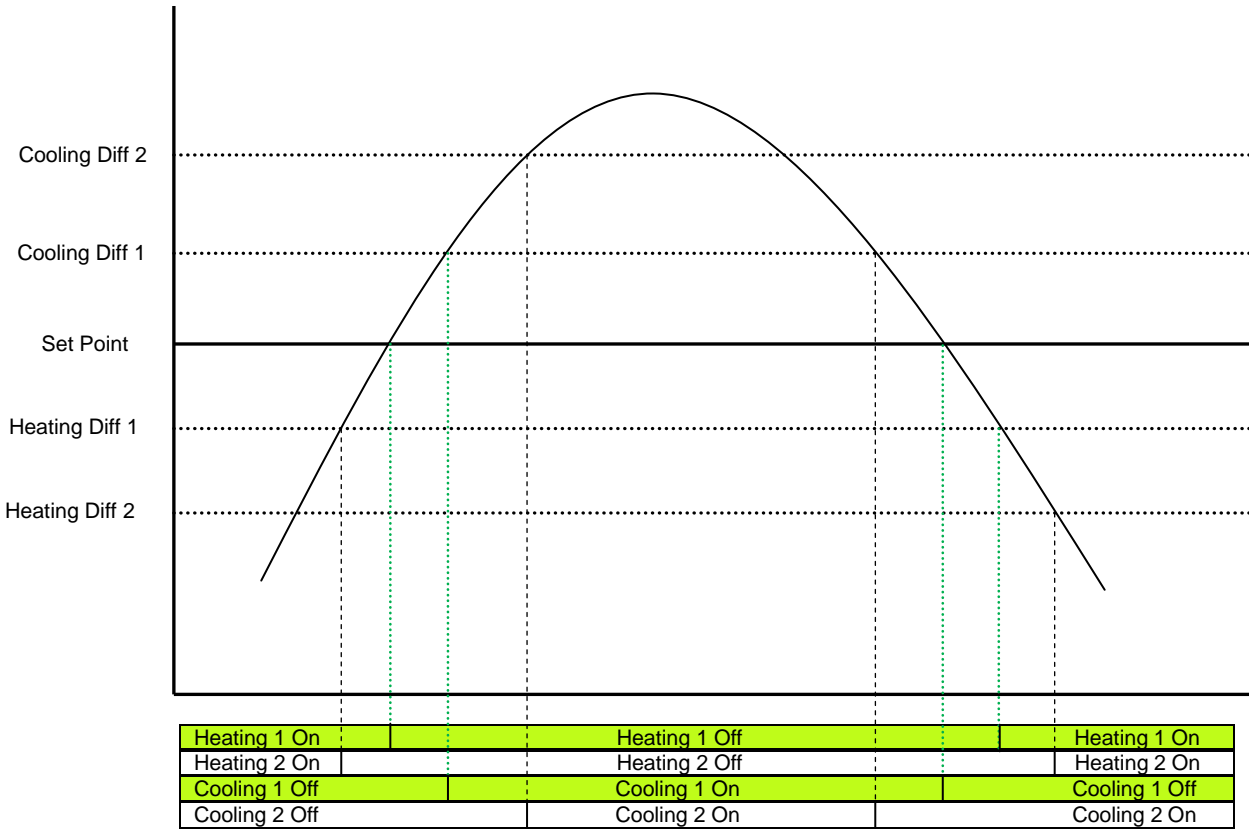

The thermostat will operate to the above graph during the on times of the timer (either local or remote). It is possible to turn the timer permanently on therefore the thermostat would run continuously. With the timer configured for local operation, set both on times 1 & 2 to 00:00 and both off times 1 & 2 to 23:59 on the desired days. With an input selected as either Run N/C (normally closed) or Run N/O (normally open) the thermostat would require a run signal before it will operate. If no input is configured then the run feature is disabled. Heating and cooling stage 2 can be configured to come on at a pre-determined temperature or after a time delay.

During normal operation, the up and down keys can be used to adjust the current operating set point, limited by the upper and lower set-point settings. Press and hold both the up and down keys until the service icon, the spanner symbol, is displayed. The value shown on the screen is the current temperature set point, use the up or down button to adjust the set point. Hit the enter button when complete to save and exit. Note this will not change the parameter "Set Point" it will only allow the user to change the current operating set point. Once adjusted the stat will continue to control to this set point until the controller is either power cycled or the process is followed to adjust the operating set point back to the previous set point. If the current control set point has been adjusted via this process and the parameter "Set Point" is then adjusted then the offset will still remain and is added/subtracted to the new set point. E.g. Parameter "Set Point" is set to 16. The above process is used to adjust the operating set point to 18. The parameter "Set Point" is now changed to 17. The operating set point will now be 19 (set point 17 + 2 offset through up/down buttons).

The controller has 2 probe inputs that can be used together (weighted) to form the control temperature, or the controller can be configured to use 1 probe only. Setting control weight to 100% would use only probe 1. 0% would use only probe 2 for control. 50% would use an average of probe's 1&2.

The fan(s) will run continuously when the controller is operational, even if the temperature is in the dead zone where no cooling or heating relays are on. When more than 1 fan has been selected as outputs, the fans can be set to Low, medium, high or Auto. If set to auto, the software fuzzy logic will allocate the best speed for the control temperature. On the low, medium or high setting, these can be cycled by pressing and holding the controller # key. When the spanner icon appears on the display the current fans mode will be shown.

If fans mode is set to remote, a GP timer channel must be set up for the fans to run. Note, if the fans go off, the cooling and heating functions will also be turned off. A fans run-on function is available to keep the fans running for a pre-determined period after the off command has been received.

During the heating cycle, heating stage 1 will come on, then heating stage 2 will come on after a delay period or if the temperature reaches the set point (parameter: - Heating Stage 2 delay)

The alarm relay will come on during any alarms or faults.



Ensure that all power is switched off before installing or maintaining this product

The over-ride input will do the following: -

If the thermostat timer is on, it will disable the thermostat function until the next timer on time.
 If the thermostat timer is off, it will turn the thermostat function on until the next timer off time.
 An over-ride off delay can be set to give a delay from the over-ride input to the actual off.

If frost detect has been enabled, irrespective of the controllers other settings, if the temperature falls below the frost set-point, the controller starts heating up to the frost diff point, where the heating relay(s) will go off.

Note: - At least one relay output must be selected as a fan before the thermostat control will operate. This is a precautionary measure to prevent the user from enabling a heater without the appropriate fan(s) being selected as in some applications this could damage the heating equipment.

Relay Actions

Relays configured for "Heating" are energised for on, relays configured for "Cooling" or "Fan" are de-energised for on. (Therefore do not use Relay 5 for cooling or fan operation, as only the N/O is available.)

Alarm Relay Action

The alarm relay has its' common, NO and NC contacts available for use.

This relay will normally be energised (no alarm) and be de-energised when an alarm occurs (after the alarm delay time-out)

The table below shows the Alarm relay action

State	Alarm Delay	Alarm Relay
Probe Fault	Fixed 10 Seconds	✓
Run Signal	Fixed 10 Seconds	✓
Under temperature	Variable (parameter)	✓
Over temperature	Variable (parameter)	✓
General Fault	Variable (parameter)	✓
Over-ride	Variable (parameter)	✓

GP Timer Set-up

It is possible to set the Control Stat timer for remote operation (P70 = 1). A GP Timer must be set up to control the timer on/off period. For GP Timer set up please refer to the Data Manager user guide found on the RDM website. The following settings should be followed: -

- Output Type – This should be set to "General".
- Output Mask – This should match the "Controller Name".
- Output Channel – Set this to "5". This will allow the GP Timer to control the state of the controller timer.



Remote Commands

The following commands can be used by a Data Builder program: -

Command	Value to send	Description	Conditions
Haccp Command	0	HACCP LED OFF	
	1	HACCP LED On	
	2	HACCP LED Flashes	
Button Command	0	Buttons backlights Off	
	1	Buttons backlights On	
	2	Buttons Backlights Flash	

Use an "Analogue Out" block configured to the controller name and in the value field type in the command you require. Use a "Setting block" as the input to the "Analogue Out" block to send the Value.

See Example on the right, which switches on the Haccp LED on CROOM1

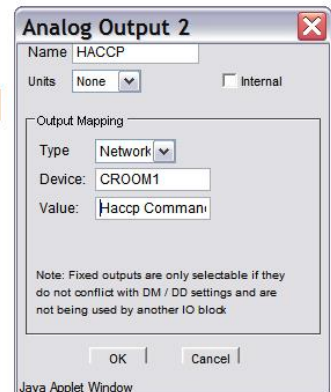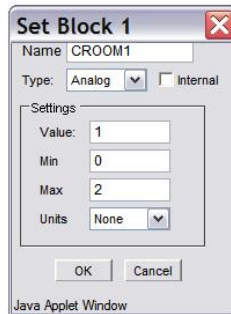

Ensure that all power is switched off before installing or maintaining this product

Specification

	Mercury Mk2 Controller PR0710-STA	Intuitive Mercury controller PR0750-STA
Power requirements		
Supply Voltage Range	100 - 240 Vac \pm 10%	100 - 240 Vac \pm 10%
Supply Frequency	50 - 60 Hz	50 - 60 Hz
Maximum supply current	5.2 Amps (when relay 5 is fully loaded)	2 Amps
Typical supply current	<1 Amp	<1 Amp
General		
Operating temperature range	+5 ^o C to +50 ^o C	-10 ^o C to +60 ^o C
Storage temperature range	-20 ^o C to +65 ^o C	-20 ^o C to +65 ^o C
Environmental	Indoor use at altitudes up to 2000m, pollution degree 1, installation category II. Voltage fluctuations not to exceed \pm 10% of nominal voltage.	Indoor use at altitudes up to 2000m, pollution degree 1, installation category II. Voltage fluctuations not to exceed \pm 10% of nominal voltage.
Size	78mm (W) x 36mm (H) x 110mm (D)	157mm (W) x 67mm (H) x 120 (D)
Approx Weight	170 grams	500 grams
Safety	EN61010	EN61010
EMC	EN61326; 1997 +Amdt. A1; 1998	EN61326; 1997 +Amdt. A1; 1998
Ventilation	There is no requirement for forced cooling ventilation	There is no requirement for forced cooling ventilation
Class 2 Insulation	No protective Earth is required and none should be fitted	No protective Earth is required and none should be fitted
Supply Fuse	The host equipment must provide a suitable external over-current protection device such as:- Fuse: 6.3A 240 Vac Antisurge (T) HRC conforming to IEC 60127	Built in fuse holder, fuse 2A 240Vac Antisurge (T) HRC conforming to IEC60127, 32 x 6.3mm
Or MCB	6A, 240 VAC Type C conforming to BS EN 60898	2A, 240 VAC Type C conforming to BS EN 60898 (Note: controller has integral 2A fuse)
Relay Fuse	Not Fitted	10A 240Vac Antisurge (T) HRC conforming to IEC60127, 32 x 6.3mm
Relay Specification		
Relays 1-4 Mechanical Type (M) Exclusive common		
Max current	6A Resistive (Cos ϕ = 1) 2A Inductive (Cos ϕ = 04)	.10A Resistive (Cos ϕ = 1) 3A Inductive (Cos ϕ = 04)
Max voltage	250Vac, 30V dc	250Vac. 30V dc
Relay Fuse	N/A	10A 240Vac Antisurge (T) HRC conforming to IEC60127, 32 x 6.3mm
Relay 5 Mechanical Type (M) Common connected to supply live		Relay 5 Mechanical Type (M) Exclusive common
Max current	3A (non inductive), COS ϕ =0.4 2A (inductive load) 200,000 operations	10A Resistive (Cos ϕ = 1) 3A Inductive (Cos ϕ = 0.4)
Max voltage	250Vac (Internal supply)	250Vac. 30V dc (external supply)
	For compliance with the LVD, relays 3, 4 and 5 commons must be at the same potential as the supply voltage	All relays are independent and can operate at different potentials to the supply voltage.



Warning: Relay 5 output has hazardous voltages (Supply input voltage potential)
This does not apply to the Intuitive Mercury controller



Ensure that all power is switched off before installing or maintaining this product

Inputs


Input resistance: 3.01K Ohms (for PTC or NTC type probes)
 Input type: PT1000 or NTC2K or NTC2K25 or NTC10K (selectable)

Comms: RS232 with flow control

Installation

Panel Cut-out and Clearances

Mercury Mk2 (Flush mount controller)

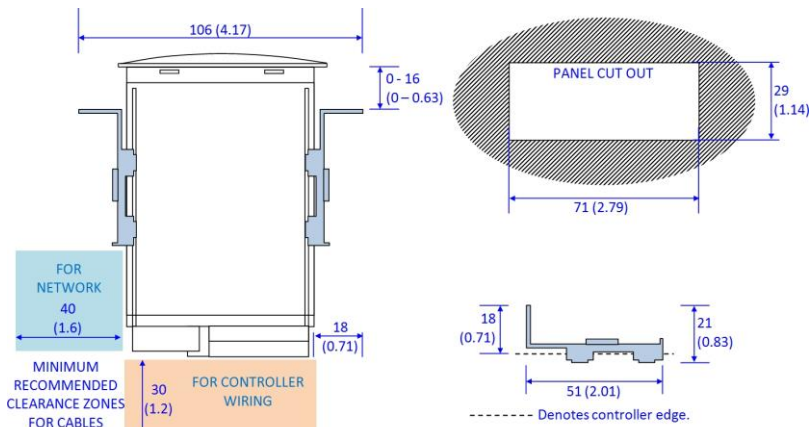


Fixing

The controller is fixed by sliding the 2 plastic retaining clips up to rear of the panel. These clips have a ratchet action and can be removed by holding in the clip sides and sliding back.

There is no requirement for forced cooling ventilation

Dimensions


Mercury Mk2

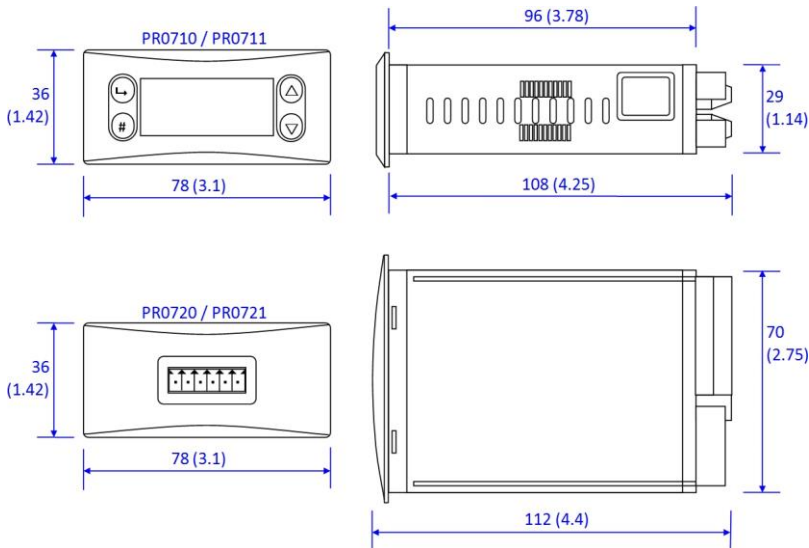


Ensure that all power is switched off before installing or maintaining this product

Dimensions

Intuitive Mercury controller

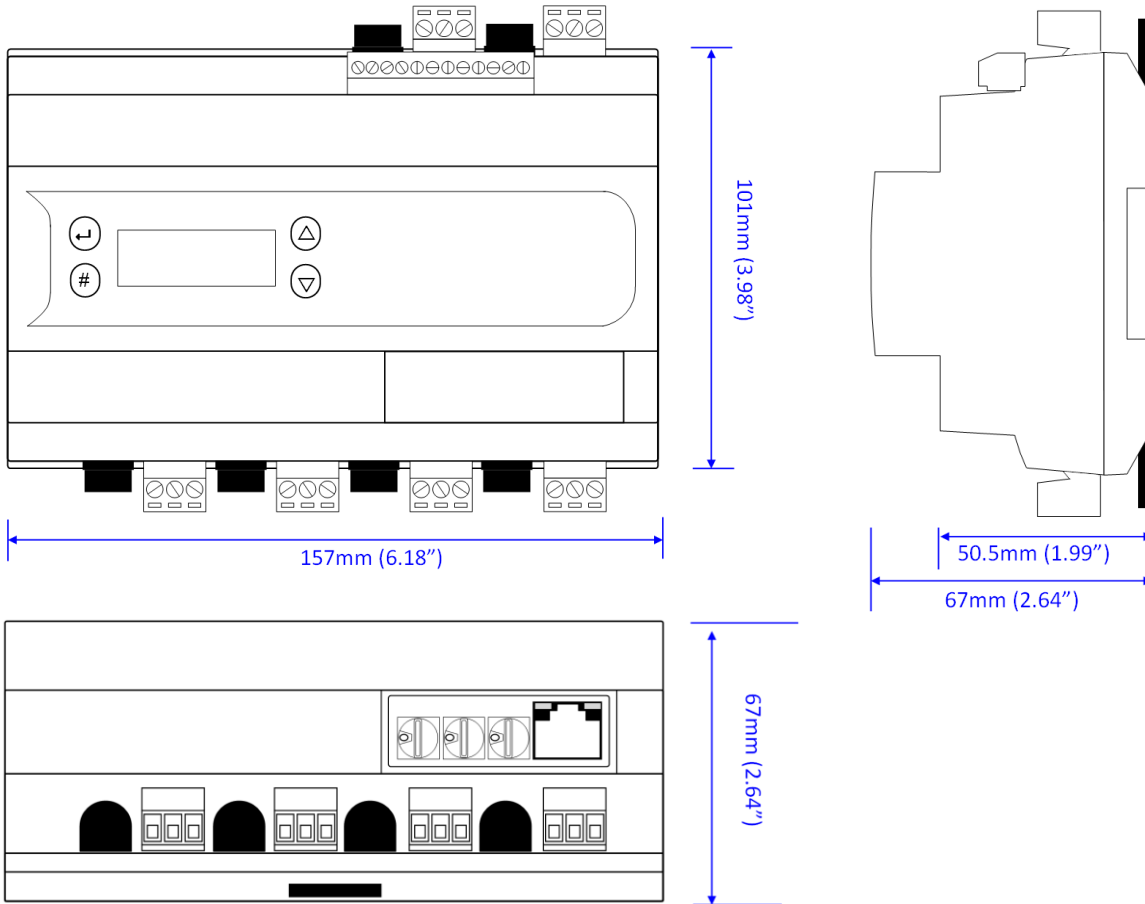

Intuitive Mercury Mounting Instructions

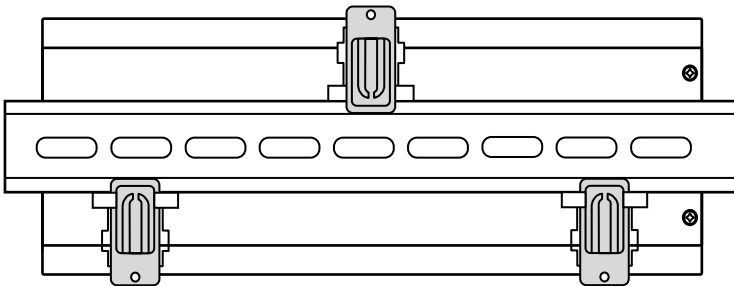

Three clips fix the Intuitive Mercury securely to DIN rail. Pull each clip until it “clicks” to remove the controller. Each clip has a mounting hole to provide an alternative fixing mechanism to DIN mounting.

Cleaning

Do not wet the controller when cleaning. Clean the front by wiping with slightly dampened lint free cloth.

Disclaimer

The specifications of the product detailed in this document may change without notice. RDM Ltd shall not be liable for errors or omissions, for incidental or consequential damages, directly or indirectly, in connection with the furnishing, performance or misuse of this product or document.



Ensure that all power is switched off before installing or maintaining this product

Revision History

Revision	Date	Changes
1.0	03/05/11	Introduction of Intuitive range
1.0b	06/01/15	Operating temperature range updated



Ensure that all power is switched off before installing or maintaining this product